



USER MANUAL

DIGITAL KEYSAFE BOX LHL-KEYSAFE



Scan to download the TTLOCK APP Or search Google Play or Apple Store for "TTLOCK"




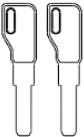

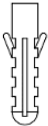



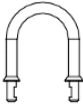
TABLE OF CONTENTS

- P2.** TABLE OF CONTENTS
- P3.** GENERAL INFO
- P4.** PACKING ACCESSORIES
- P5.** PRODUCT OVERVIEW
- P7.** PRODUCT SPECIFICATIONS
- P8.** RESTORE TO FACTORY DEFAULTS
- P10.** INSTALLATION STEPS
 - P10.** WALL MOUNTING
 - P14.** INSTALLING BATTERIES
 - P15.** FUNCTION TEST
 - P16.** HANG BY SHACKLE
- P18.** TTLOCK APP SETTINGS
 - P18.** APP DOWNLOAD
 - P19.** CONFIGURE THE LOCK
 - P20.** LOCK FEATURES AND SETTINGS
- P28.** TROUBLESHOOTING/FAQ

NOTES


1 PACKING ACCESSORIES

Included with the LHL-KEYSAFEBOX are the below:

 <p>1 x KEY SAFE BOX</p>	 <p>2 x MANUAL KEY</p>	 <p>4 x D4X30MM WOOD SCREW</p>	 <p>4 x D6X30MM EXPANSION PLUG</p>
 <p>2 x FOB CARDS</p>	 <p>1 x USER MANUAL</p>	 <p>1 x USB-C CABLE</p>	 <p>1 x METAL SHACKLE</p>


2 PRODUCT OVERVIEW

FRONT

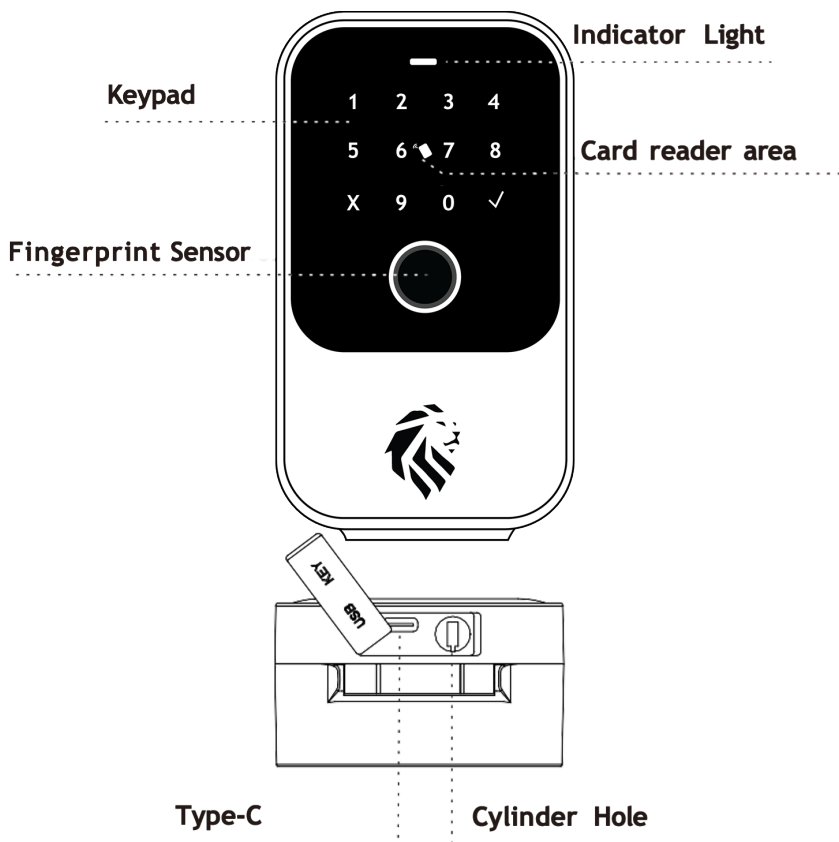


2 PRODUCT OVERVIEW

INSIDE

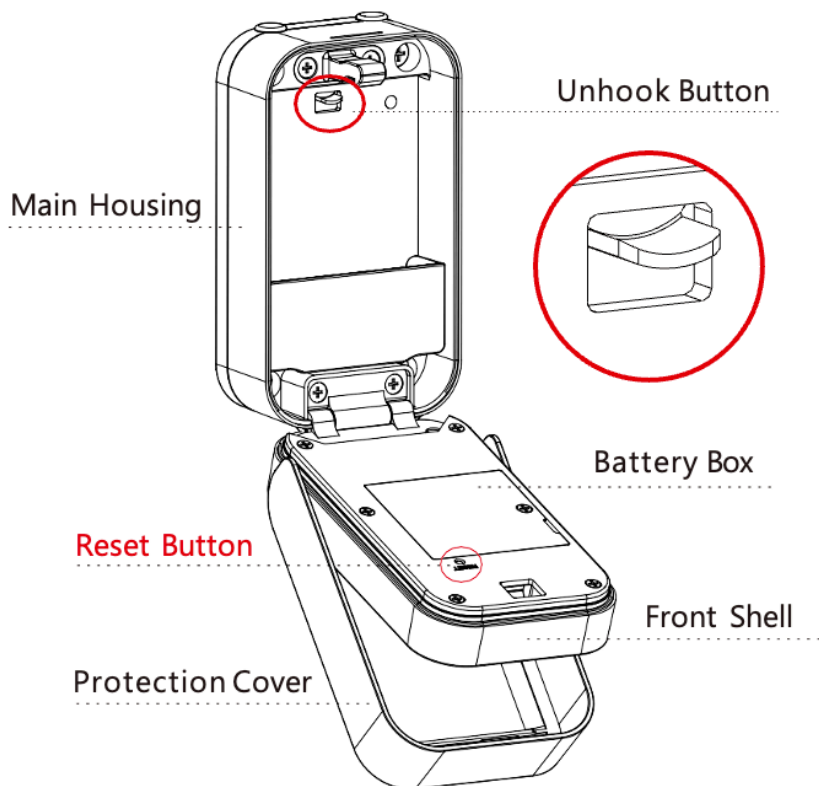

Material	Aluminium alloy,zinc alloy, tempered glass
Colour	Black
Installation Options	Wall mount or via shackle
Communication	BLE 5.0
OS Support	iOS 7.0 or above, Android 4.3 or above
Battery Life	5000 unlocks (10-12 Months)
Power Supply	DC6V / 4 x AAA Alkaline Batteries
Static Current	< 80uA
Dynamic Current	< 200mA
Unlock Methods	TTLock App, Passcode, Manual Key, Fingerprint
Unlock Time	1-1.5 Seconds
Working Temperature	-20C - 55C
Working Humidity	10%-95%
Factory Passcode	123456 (Invalid after configuration)
Virtual Passcode	Available
IP Level	IP65 Certified
User Capacity	Fingerprint: 100 Passcode: 250 Card: 1000

4 RESTORE TO FACTORY DEFAULTS

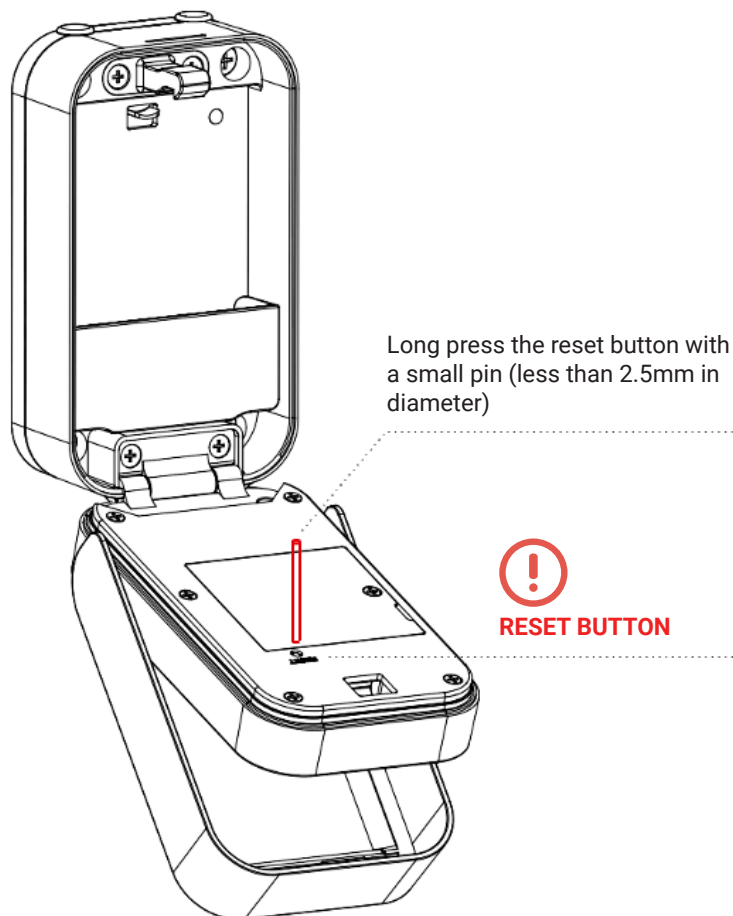

FACTORY DEFAULT PROCEDURE

There is a reset button located on the back of the front shell, after the device is powered on press the button for 3 seconds or until you hear the voice prompt "Please enter the initialization passcode".

Enter 000

Press the ✓ key

If the passcode has been successfully entered then you will hear "Administrator Deleted Successfully".


The default passcode is now set to "123456"



5 INSTALLATION STEPS

5.1.1 WALL MOUNTING


5.1.1 REMOVE PLUGS

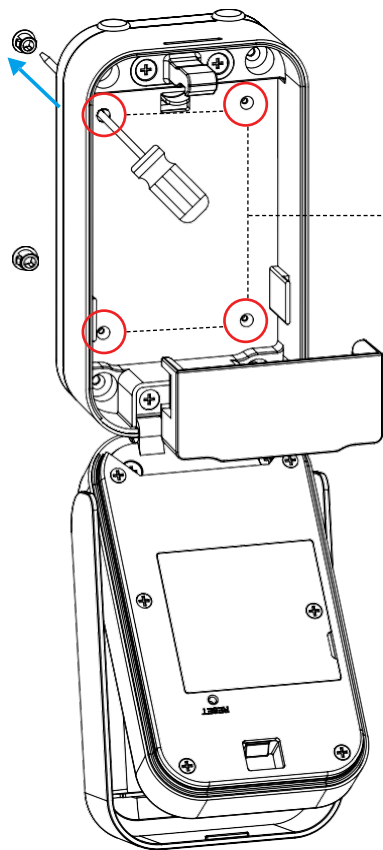

Remove the four plugs from mounting holes inside the Keysafe Box

5 INSTALLATION STEPS


5.1.2 MARK TEMPLATE ON WALL

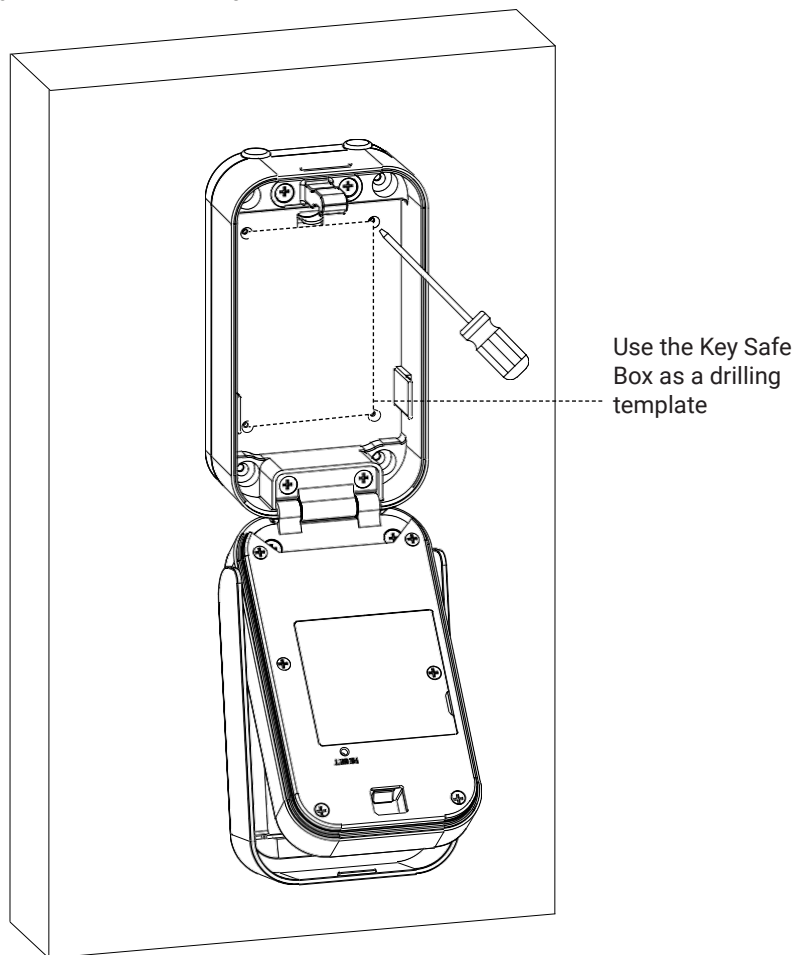

5 INSTALLATION STEPS


5.1.3 PRE DRILL HOLES

Drilling depth:D6X40mm

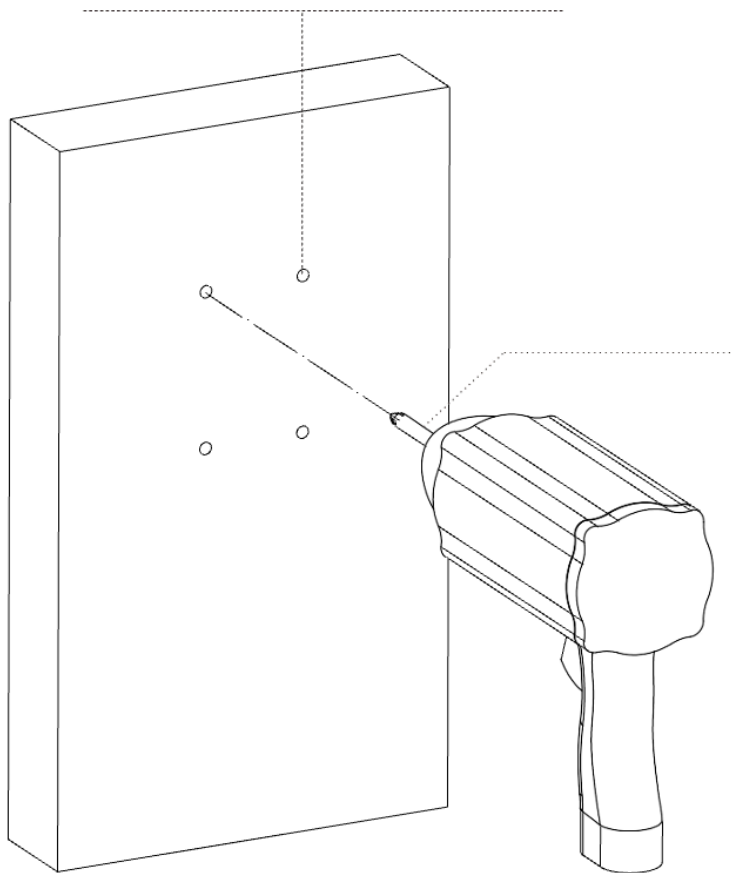

5 INSTALLATION STEPS


5.1.4 INSTALL EXPANSION PLUGS AND SCREW KEY SAFE BOX TO WALL

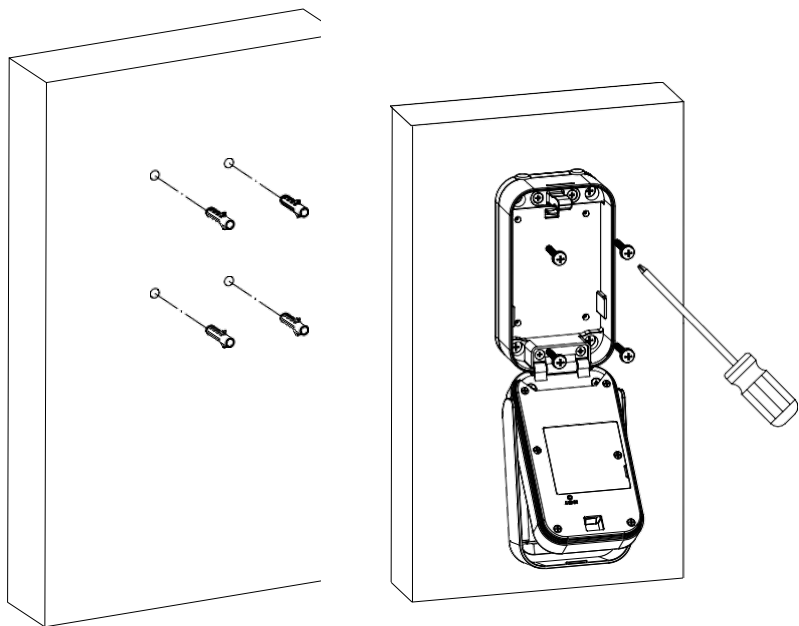

5 INSTALLATION STEPS

5.1.5 INSTALLING BATTERIES

Insert 4pcs AAA alkaline batteries into the battery box matching the polarity(+/-) and tighten the battery box cover.

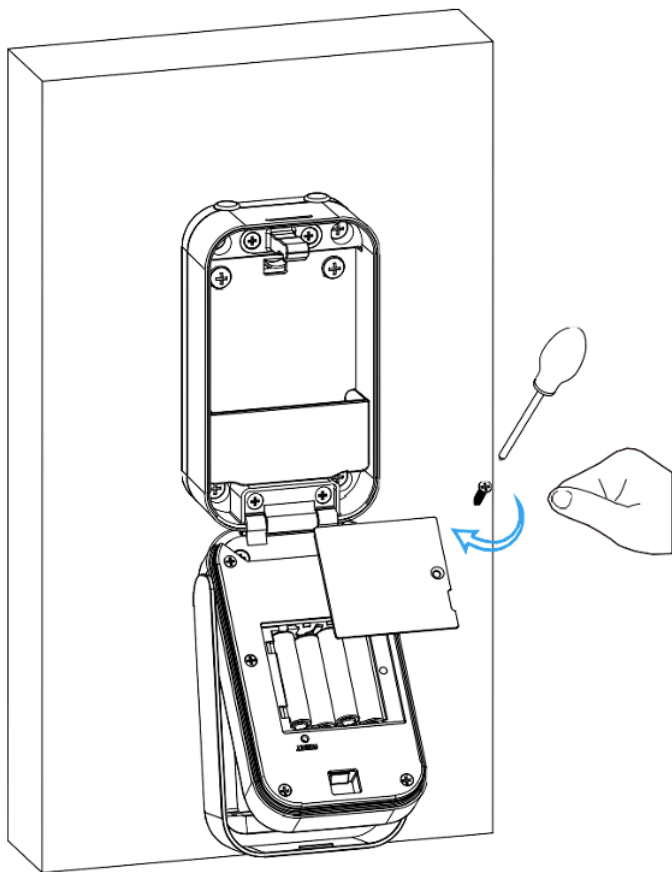


5 INSTALLATION STEPS

5.1.6 FUNCTION TEST

*Turn over the protection cover follow the arrow direction.


*Press fingerprint or passcode to unlock the key box

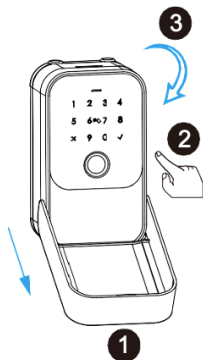

5.4 KEY TEST

*Test the key to unlock properly


*Don't put the keys inside the box

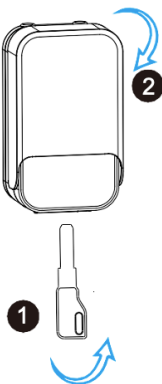

5 INSTALLATION STEPS


5.2 HANGING BY THE SHACKLE

5.2.1 REMOVE PLUGS

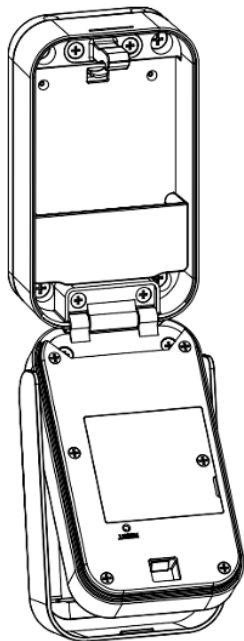

5.2.1 REMOVE PLUGS


Put 4pcs AAA alkaline batteries and fix the battery box cover

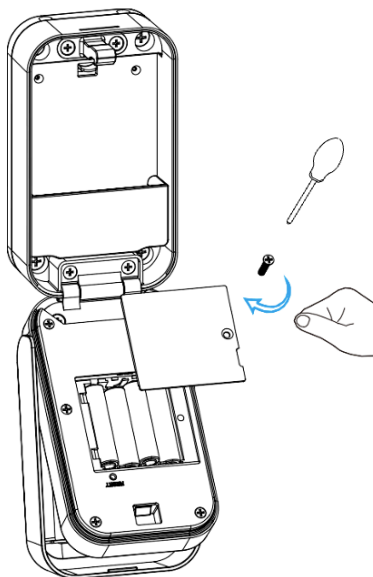

5 INSTALLATION STEPS


5.2.3 SHACKLE LOCKING (DOOR HANDLE)

Buckle the shackle and lock box in the direction of the arrow.

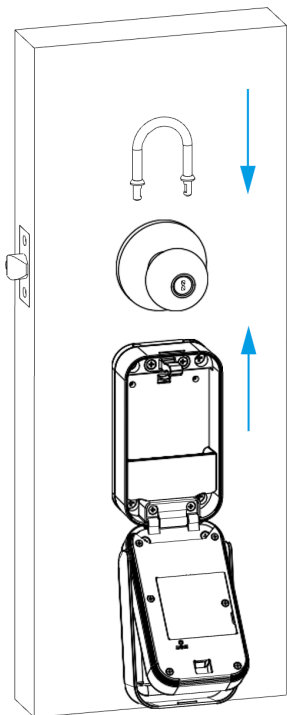

5.2.3 SHACKLE UNLOCKING (DOOR HANDLE)

Push the button to the top, then detach the lock box and shackle.

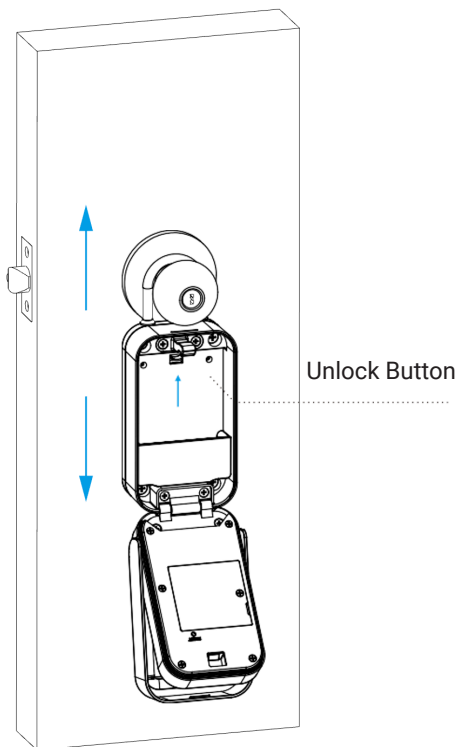

6 TTLOCK APP SETTINGS

6.1 DOWNLOAD AND REGISTER IN TTLOCK APP

6.1.1 DOWNLOAD APP

Please download the TTLOCK on the Apple store or Google Play.



6.1.2 REGISTER AN ACCOUNT IN TTLOCK

Register within the TTLOCK with your email address or your phone number

The screenshot shows the 'Register' screen with two tabs: 'Email' (selected) and 'Phone'. Below the tabs, there is a 'Country/Region' dropdown menu. Under the 'Email' tab, there is a text input field for 'Enter your Email', followed by 'Password' and 'Confirm Password' fields. A note states: 'Your password must have 8-20 characters, and include a minimum of two types of numbers, letters and symbols'. There is a 'Verification Code' field with a 'Get Code' button. At the bottom is a 'Register' button and a checkbox for 'I've read and agreed User Terms Privacy Policy'.

Select either "Email" or "Phone" registration


The screenshot shows the 'Register' screen with the 'Phone' tab selected. The 'Country/Region' dropdown is set to 'China+86'. Below it, there is a text input field for the phone number '18024212836'. This is followed by 'Password' and 'Confirm Password' fields. A note states: 'Your password must have 8-20 characters, and include a minimum of two types of numbers, letters and symbols'. There is a 'Verification Code' field with a 'Get Code' button. At the bottom is a 'Register' button and a checkbox for 'I've read and agreed User Terms Privacy Policy'.

Enter your email and set up your password


6 TTLOCK APP SETTINGS

6.2 CONFIGURE THE LOCK


Open the TTLOCK App on your device and select the “Add Lock” button in the menu

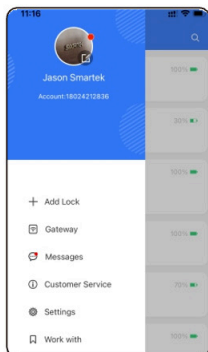

Select the “Add Lock” button

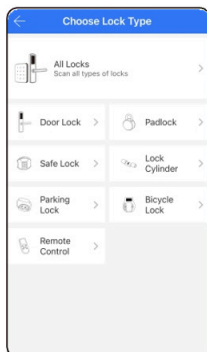


Select “All Locks” from the menu

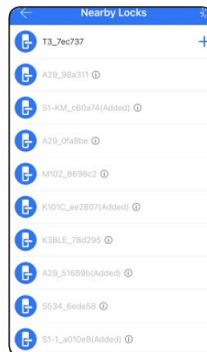

Select your lock from the list by pressing “+”



Assign a name to the lock


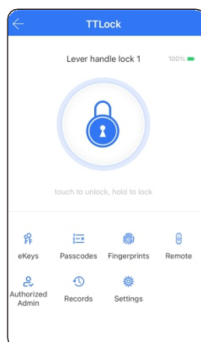


Lock added successfully

6 TTLOCK APP SETTINGS

6.3 LOCK FEATURES AND SETTINGS


Under lock settings, you can see the features for the locks that you have registered including eKeys, IC card info, Fingerprint management remote locking records and lock settings.

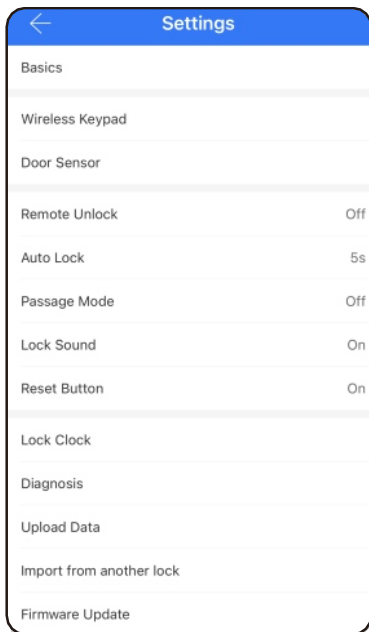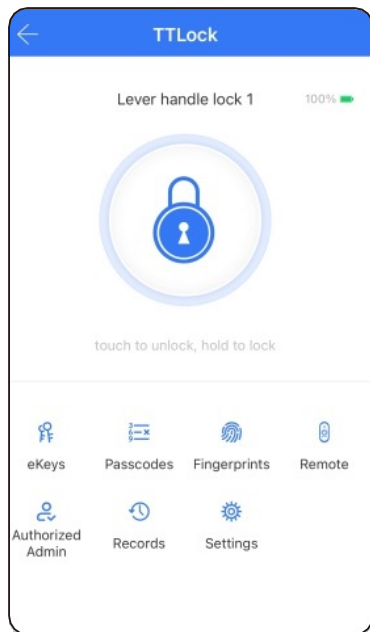


6 TTLOCK APP SETTINGS

6.4 FINGERPRINT ENROLLMENT

Select "Fingerprints" from the lock settings and enroll the required fingerprint.

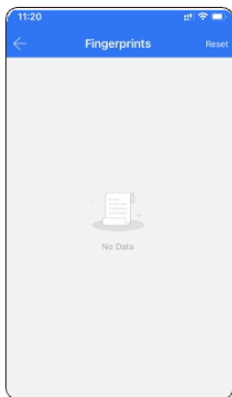

Select "Add Fingerprint"

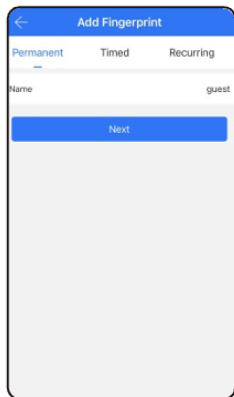

Choose type of access required



Select "Start"




Follow onscreen instructions


6 TTLOCK APP SETTINGS

6.5 ENROLL PASSCODE


Select “Passcode” from the lock settings

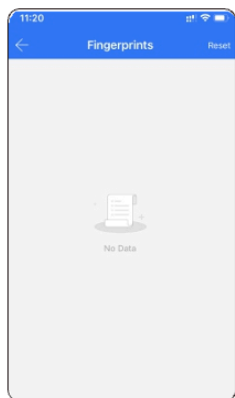


Select “Add Passcode”

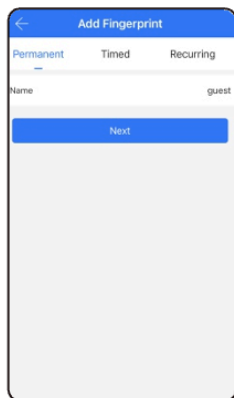

Choose type of access required

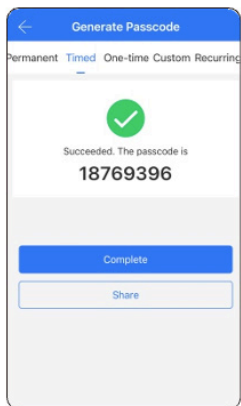

Select “Generate Passcode”

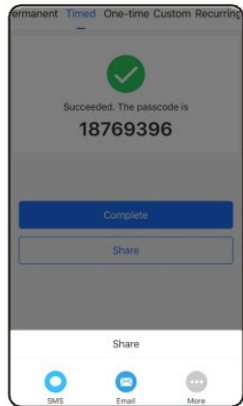


Choose how to share access details


6 TTLOCK APP SETTINGS

6.6 ENROLL eKEY


Select “eKeys” from the lock settings

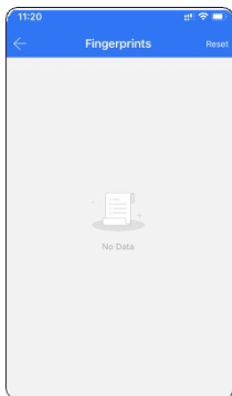

Select “Send eKey”

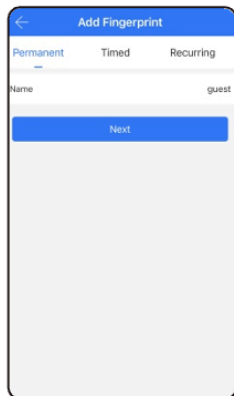

Choose type of access required

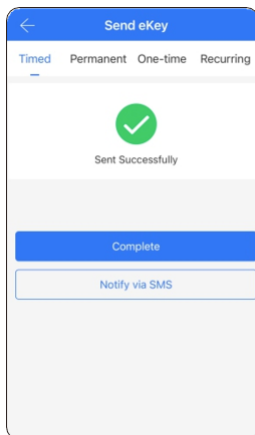


Select “Notify via SMS”


6 TTLOCK APP SETTINGS

6.7 PASSAGE MODE (ALWAYS OPEN)

Tick “Passage mode” from the lock settings to enable and disable

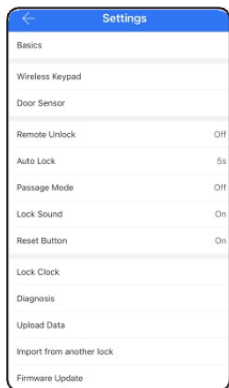

Select “Passage Mode”

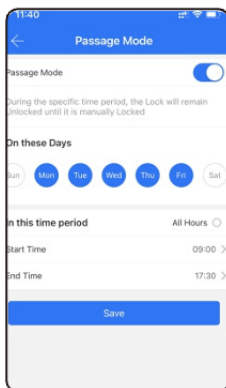


Enable or Disable or set schedule


6 TTLOCK APP SETTINGS

6.8 RESET LOCK

Select “Delete” from the lock settings

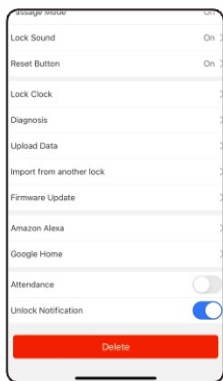

Select “Delete”

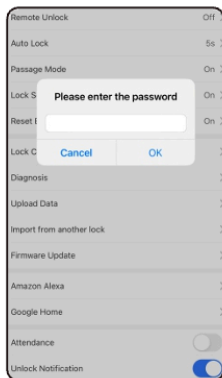

Enter Administrator Password



Passcode will be reset to: 123456

7.1 GATEWAY SPECIFICATIONS

The Wi-Fi gateway is required to access the lock remotely.

Model: LHL-GATEWAY-WIFI

Dimension: 70x70x26mm Network: Wi-Fi 2.4G

IEEE Standard: 802.11b/g/n


Power Interface: Type C USB

Power Input: DC5v/500mA






Scan the QR code for more info on the WI-FI Gateway or go to www.lionheadlocks.com.au

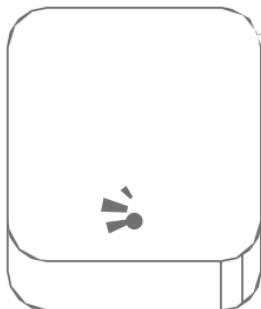7.1.1 GATEWAY STATUS (LIGHT STATUS)



When the gate way is powered on:


-  **Red/Blue Alternating:** Stand By (ready for connection)
-  **Blue Light:** Working Mode
-  **Red Light:** Network Failure

7 WIFI GATEWAY INTEGRATION

7.2 PAIR TTLOCK APP WITH WIFI GATEWAY




Open TTLOCK app on your device

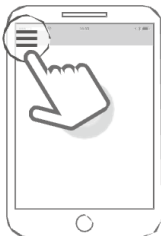


Press the menu button



Select "Gateway"

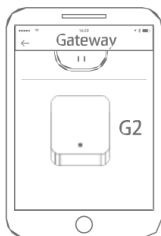

Select the "+" button then select the gateway

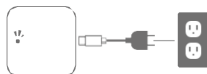

Plug the gateway in and wait the Blue/Red alternating lights



Select the "+" button next to your gateway in the list

Can I unlock the door with my fingerprint before configuration?

After you finish the installation and power on the lock with 4pcs AAA alkaline battery and you can use any fingerprint to unlock the door to ensure you can access the door before you configure the lock with mobile APP.

What batteries are required?

4 pcs AAA Alkaline Batteries

Is the lock "auto locked"?


After you unlock the door one time, the door will wait for 5 seconds before locking again. In this time close the "Front-panel" to lock.

Can the lock be reset for another install?

Please remove this device from your mobile App you can click the "Delete" to reset the lock or hardware reset

I insert the manual key and turn but I can not unlock the door.

Please insert the manual key and Opening and closing panel unlocking, refer to the photo below:

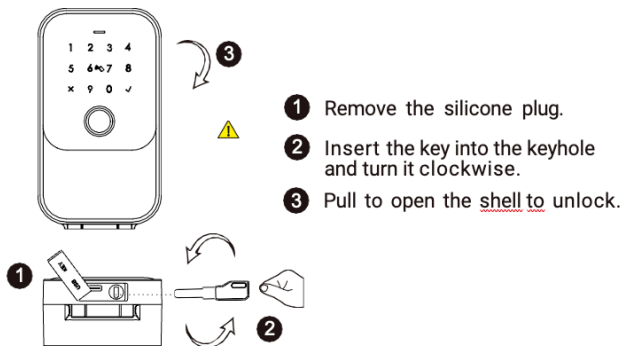

Is it possible to remotely access my door lock?

To access your lock remotely a WiFi Gateway is required (LHL-GATEWAY-WIFI) to be configured alongside the lock and app.

NOTES

NOTES



THANK YOU