

Aluminum Door Lock User Manual

1.1 Product features



Product introduction:

Applicable door types: aluminum doors, sliding doors, sliding doors, steel doors, interior doors, etc.


Mortise: 2885,3085,3585...etc., 3585 multi-point and 2885/3585 double hook.

1.1.2 Product features

4 AAA batteries battery supply;

5 unlock methods:APP/fingerprint/password/card /mechanical key

1.1 Size

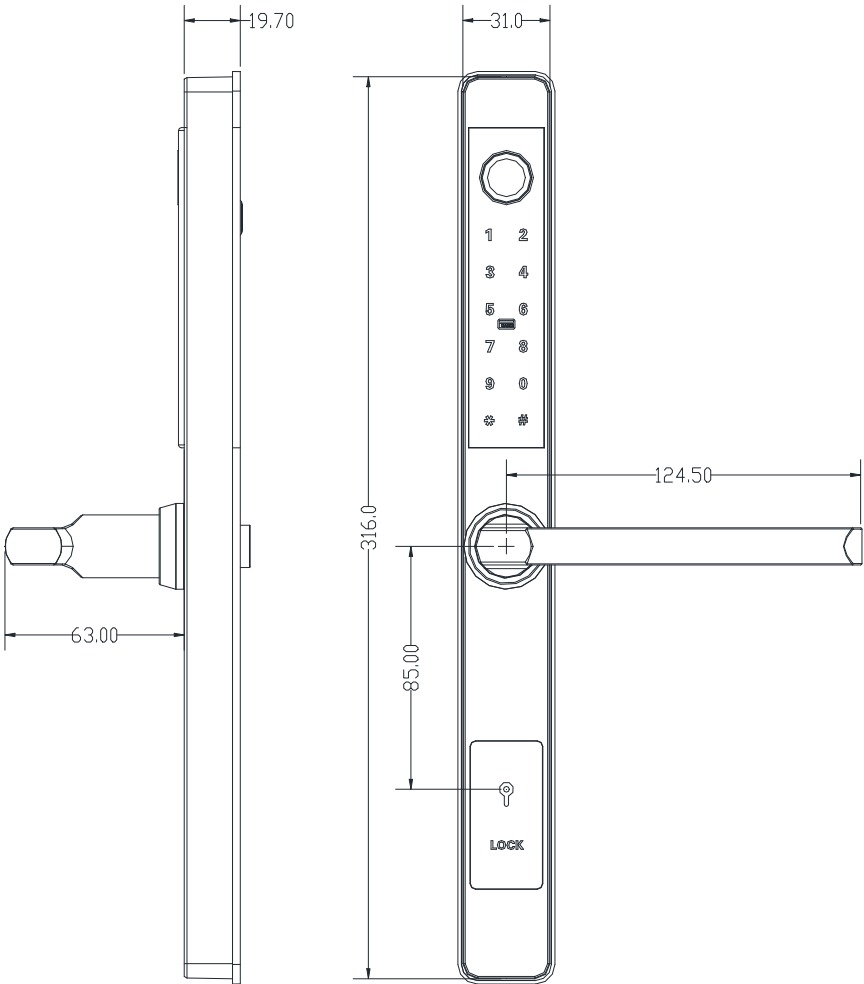

2.2Product data

Bluetooth Standard	Bluetooth 5.0 BLE	
Mobile phone system	Android 4.3 / IOS7.0 above	
Battery supply	4PCS AA alkaline batteries	
Low power alarm voltage	4.8V	
Voltage Range	4.5~9V	
Standby current	85ua	
Working current	<200mA	
Unlock time	≈1.5S	
Work temperature	-20~70℃	
Password capacity	Customized code	250
	Dynamic Password	Unlimited
Supported card type	MIFARE M1 Card	
IC card capacity	1000PCS	
Unlock method	App,password,fingerprint,IC card,mechanical key	
Fingerprint capacity	200PCS	
FAR	<0.001%	
FRR	<1.0%	

Door lock setting

Function	Operation method
1. Factory Reset	Press and hold the reset button on the lock, hear "Please enter the initialization code", enter 000#, the lock will be restored to factory settings.
2. Set admin password	When no administrator password is set and no mobile administrator is added, enter *12#123456# -> enter administrator password# -> enter the same password# again. Note: This step is not required when using the mobile app management.

3. Change admini password	Select the lock on the App -> Click on Settings -> Click on "Admin Unlock Password" -> Enter the new admin password. Note: must be close to the door lock to operate.
	Enter *12# original admin password# new admin password# same new admin password# on the lock keypad to change the admin password.
4. Add Mobile Admini	When the administrator password is not set and the cell phone administrator is not added, touch the panel and hear "Please add cell phone (Bluetooth) administrator" and add the door lock on the app.
	After setting the administrator password or adding a mobile administrator, you can allow other App accounts to add this lock as a new administrator by entering *83#admin password# on the lock to put the lock into the addable mobile administrator mode again. Note: After an administrator is added to the new App account, this lock under the previous account will be automatically deleted, which means that only one first-level mobile administrator is allowed to exist.
5. Delete Mobile Administrator	Select the lock you need to remove from the phone administrator in the app, click Settings, and click Delete.
	Note: After removing the administrator on the app, the lock restores factory settings and all fingerprints, passwords, and cards are invalid.
6. Add Fingerprint	Click "Fingerprint" on the app -> Add Fingerprint -> Enter fingerprint name and expiration date -> Click Next -> Click Start Adding -> Follow the phone screen and voice prompts to press your finger multiple times on the fingerprint collector according to the prompts.
	Enter *80# -> Enter admin password# -> Follow the voice prompt and enter fingerprints. Note: Fingerprints added directly on the lock can be managed by uploading them to the app through the "Upload Lock

	<p>Fingerprint" function in the app.</p> <p>After the fingerprint is successfully added on the lock, you can continue to add other fingerprints, or you can press * or wait for the timeout to exit the add mode.</p>
7. Delete Fingerprint	<p>Click the fingerprint on the app -> tap the fingerprint that needs to be deleted -> tap Delete. Note: You must operate on the lock side.</p> <p>Enter *70#admin password# on the lock to delete all fingerprints.</p>
8. Rename fingerprints	<p>Click on "Fingerprint" on the app -> click on the fingerprint you want to rename -> click on the name -> enter a new name</p>
9. Change fingerprint expiration date	<p>Click "Fingerprint" on the app -> click the fingerprint that needs to change the expiration date -> click the expiration date -> enter the new expiration date -> click Save</p> <p>Note: After setting the expiration date, the fingerprint can only open the lock within the specified expiration date. It must be operated on the edge of the lock.</p>
10. Add Password	<p>Click "Get Password" on the App -> Select Password Type: Custom -> Select Expiration Date -> Click Set Password -> Enter the password you want to add.</p> <p>Note: The "custom" password must be close to the lock operation</p> <p>Click "Get Password" on the app -> select the password type: permanent/term/single/clear/recurring -> click Get Password</p> <p>Note: These types of passwords do not require near-lock operation.</p> <p>Clear password is used to delete all passwords already in effect on the lock.</p> <p>Enter *80# on the lock -> enter the admin password# -> enter the new password# to be added -> enter the same password# again.</p> <p>Note: Passwords added directly on the lock can be managed</p>



	<p>by uploading the passwords to the App in the App's Password Management -> Upload Lock Passwords.</p> <p>After the password added directly on the lock is successful, you can continue to add other passwords, or you can press * or wait for the timeout and exit the add mode.</p>
11. Delete Password	<p>Click "Password Management" on the app -> click the password you want to delete -> click Delete.</p> <p>Note: Must be in close to the lock to operate.</p>
	<p>Enter *71#admin password# on the lock to delete all unlocking passwords (administrator passwords are not deleted).</p>
12. Change password	<p>Click on "Password Management" on the app -> click on the password you want to change -> click on Password -> enter the new password.</p> <p>Note: Must be in close to the lock to operate.</p>
	<p>Enter *10# original password # new password # new password # change password on the lock (for administrator password change, please use *12#)</p>
13. Rename Password	<p>Click "Password Management" on the app -> click on the password you want to rename -> click on the name -> enter a new name.</p>
14. Change password expiration date	<p>Click "Password Management" on the app -> click on the password that needs to be changed -> click on the expiration date -> enter the new expiration date -> click on Save</p> <p>Note: Must be in close to the lock to operate.</p>
15. Add IC card	<p>Click "IC Card" -> Add IC Card -> Enter the name and select the expiration date -> Click to confirm, then swipe the card to add.</p> <p>Note: Must be in close to the lock to operate.</p>
	<p>Enter *80# on the lock -> enter the admin password# , then add the card.</p> <p>Note: IC cards added directly to the lock can be managed by uploading them to the App under "IC Cards" -> Upload IC cards in the lock.</p>


	After you add IC cards directly to the lock, you can continue to add other IC cards, or you can press * or wait for the timeout to exit the add mode.
16. Delete IC card	Click "IC Card" on the app -> click the card you want to delete -> click Delete. Note: Must be in close to the lock to operate.
	Enter *69#admin password# on the lock to delete all IC cards.
17. Rename IC card	Click "IC Card" on the app -> click on the IC card you want to rename -> click on the name -> enter the new name.
18. Set IC card expiration date	Click "IC Card" on the App -> Click on the IC card you need to change the expiration date -> Click on the expiration date -> Enter the new expiration date -> Click on Save. Note: Must be in close to the lock to operate.
19. Add Remote key	Click "Remote" -> Add Wireless Key -> Enter the name and select the expiration date -> Click Next, then long press the wireless key blocking button for 5s to add.
20. Delete wireless key	Click "Remote" on the app -> click the wireless key you want to delete -> click Delete
21. Unlock	App Unlock: Tap the lock icon on the app to unlock it. Note: You must unlock the lock on the side of the lock. When there is a gateway, you can also unlock the lock remotely after turning on the remote unlocking function on the lock (remote unlocking is off by default).
	Touch to unlock: If the app opens "touch to unlock", open the app and touch the lock to unlock the door.
	IC card unlock: put the added IC card into the panel unlock.
	Fingerprint unlocking: put fingerprint on fingerprint sensor
	Password unlock: Enter the unlock password on the password keypad and press the # key to unlock the door. Note: During the password input, you can press * to delete the last number entered. The default unlocking password is 123456 when no

	administrator is added.
	Remote key unlock: press the unlock button
22. Auto-lock	<p>After unlock, 5 seconds timeout automatically lock (except temporary normally open).</p> <p>In normally open mode, long press the # button to close the lock.</p>
23. Passage Mode	After unlocking (before auto-locking), enter 123#, the lock is always open, and resume auto-lock status after unlocking timeout again.
24. View unlock history	<p>Select the door lock on the App and click on the operation record to view.</p> <p>Note: When there is no gateway, the unlocking record of fingerprint/IC card/password can only be viewed after unlocking through the App.</p>
	Click on a fingerprint/IC card/password on the App and click on the operation record to view all records of this fingerprint/IC card/password.
25. Virtual Security Password	Other digits can be added before and after the correct code is entered on the lock. The total length of the dummy code is 16 digits.
26. Wrong password protection	The password is wrongly entered 5 times in a row, the system will automatically lock, and after 2 minutes timeout, it will release the locked state. During the locking period, App / fingerprint / IC card unlocking can be released from the keyboard lock state.
27. Low Power Alarm	<p>When the battery voltage is lower than 4.8V, touch the bright panel, voice prompts "insufficient power, please replace the battery", while the screen backlight flashes rapidly for 1 second.</p> <p>Fingerprint / IC card / password before opening the lock, voice prompts "insufficient power, please replace the battery", and then open the lock.</p>

28. *Button	During password input, press the * button once to delete the last entered password digit. After all the digits are deleted, you can exit this mode if you are in add mode. After all the entered digits are deleted, press the * button three times again and the screen goes off.
29. Firmware Upgrade	Locks can be firmware upgraded through the app, click Settings->Lock Upgrade on the app to upgrade the lock with new firmware. Note: Must be in close to the lock to operate.
30. Demo Mode	Demo mode is closed by default, when no administrator is added, enter 24679# on the lock to open demo mode, after demo mode is opened, any fingerprint and password 123456 can open the lock, after setting administrator password or adding cell phone administrator, demo mode will be closed automatically.
31. Voice Switch	Chinese voice: Enter ""*39#admin password#1#" on the lock. English voice: Enter ""*39#admin password#2#" on the lock. Note: When no administrator is added, the administrator password is 123456.
32. Lock Sound	You can turn off the lock sound inside the app. When the lock sound is turned off, the screen will flash when the key is touched to indicate to the user that the key has been pressed.

3.Installation steps image

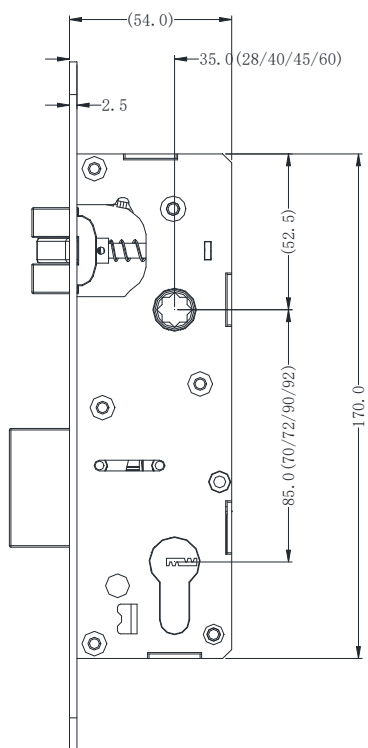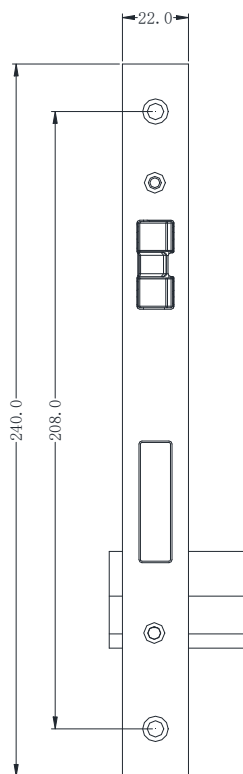

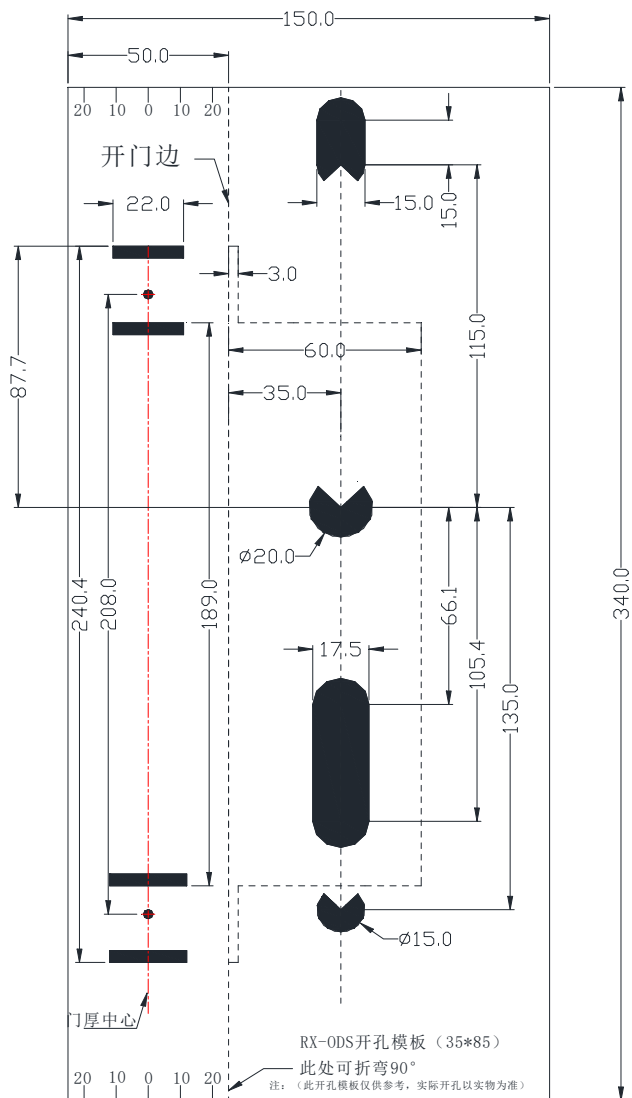

This product can be used for plastic steel doors and wooden doors, and is suitable for door thickness above 30MM.

