



USER MANUAL AND INSTALLATION GUIDE

POE GATEWAY

LHL-GATEWAY-POE



1.1 GATEWAY SET UP

The Lionhead Lock control app connects to the lock via Bluetooth by default and does not use the internet. A gateway allows the lock to connect to your home Wi-Fi network, enabling remote access. Through the gateway, users can view unlock records, sync the lock time, and remotely manage passwords.


1.1.1 LIGHT STATUS




When the gateway is powered on:

- Light flashes alternately in red and blue: Stand-by mode, ready for pairing
- Blue light: Working mode
- Red light: Network failure


1.1.2 PAIRING GATEWAY WITH APP

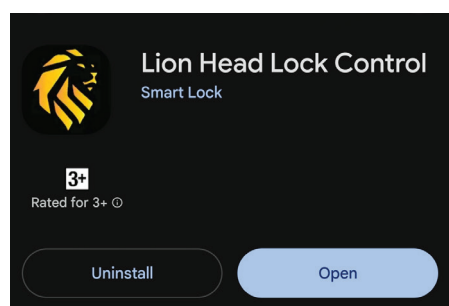


1. Open the Lionhead lock control app on your phone.

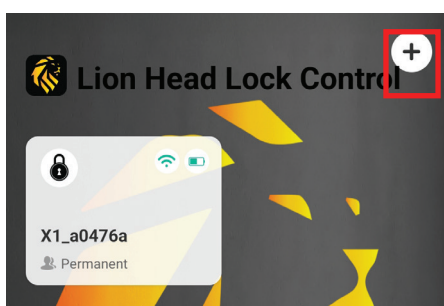

 
2. Tap the "+" (Add) button in the app.

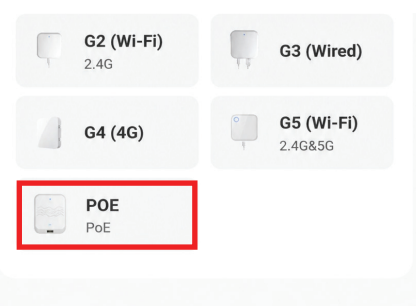


3. Choose POE as the gateway type.

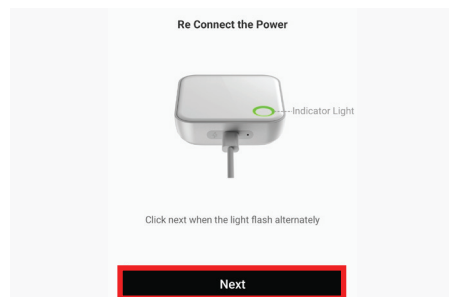

 
4. Plug in the gateway and power it on. The light should flash red and blue alternately and select "Next".

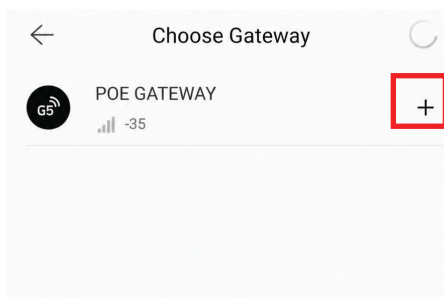

 
5. Choose your Gateway by tapping "+" from the list

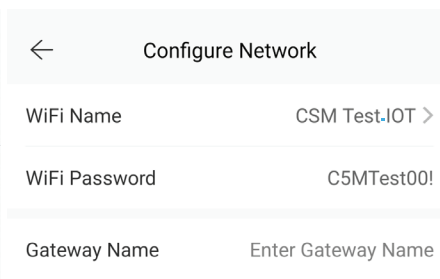

6. Choose your Wi-Fi network and enter the Wi-Fi password

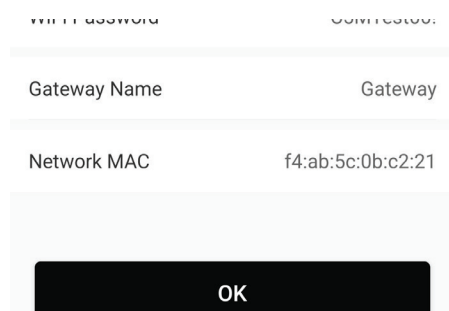

7. Enter Gateway Name and click Ok

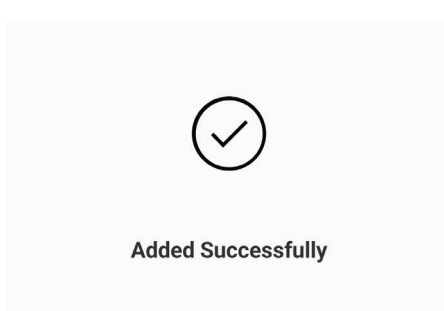

8. Wait for confirmation — Gateway added successfully.

2. SUPPORT

For technical and sales support please contact Lion Head Locks on the below details.

INFO@LIONHEADLOCKS.COM.AU

WWW.LIONHEADLOCKS.COM.AU