



USER MANUAL AND INSTALLATION GUIDE

STRONGA DIGITAL CAMLOCK

 
LHL-STRONGA-CAMLOCK1



USER MANUAL AND INSTALLATION GUIDE

STRONGA DIGITAL CAMLOCK

LHL-STRONGA-CAMLOCK1

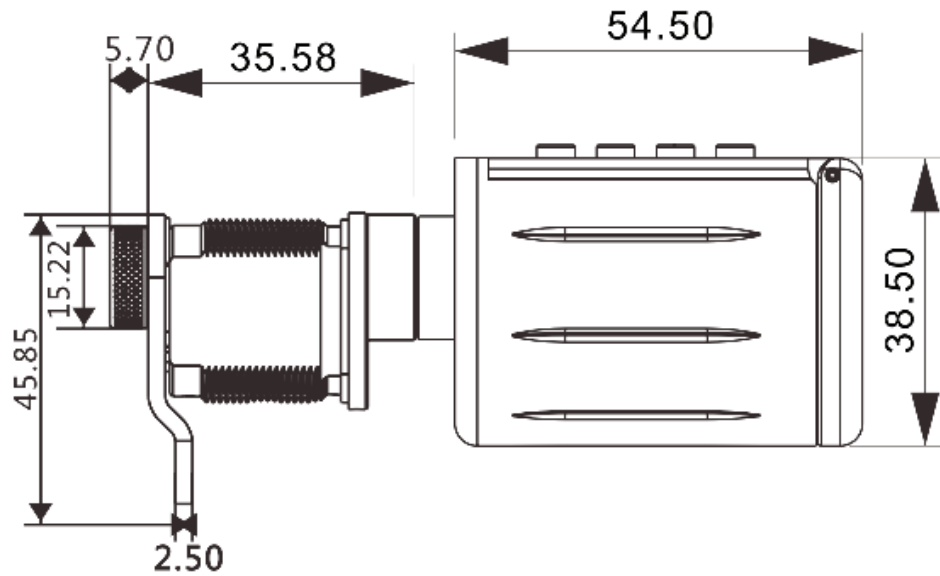

IMPORTANT NOTES

- Keep the mechanical keys outside the property to avoid being locked out.
- Replace the batteries immediately when the low-battery warning sounds.
- Read this manual carefully before installation and keep it for future reference.

1. INTRODUCTION

The LHL Stronga Digital Cam Lock is a compact yet powerful smart locking solution designed to deliver secure, keyless access for cabinets, lockers, drawers, and a wide range of enclosure applications. Engineered for both residential and commercial environments, it combines advanced technology with a sleek, space-saving design that integrates seamlessly into modern interiors. The lock supports multiple access methods, including PIN code, Bluetooth connectivity, fingerprint recognition, RFID card, and the TTLock mobile app, providing users with flexible and convenient control options. With intelligent user management capabilities, administrators can easily add, modify, or remove access permissions, making it ideal for shared or multi-user environments such as offices, gyms, schools, and retail spaces.

Built for durability and consistent performance, the Stronga Cam Lock ensures reliable operation while maintaining high security standards. Its modern functionality, ease of installation, and versatile application make it a practical and efficient solution for anyone seeking enhanced access control without compromising on design or convenience.

1.1 PACKING LIST

NO	QTY	NAME
1	1	Electronic Knob cylinder
2	3	User cards
3	1	Allen Key
4	2	Lithium CR2 Battery
5	1	Data wire

1.2 PRODUCT SPECIFICATIONS

Model Number	LHL-STRONGA-CAMLOCK1	Working Temp	-25C ~ 65C
Battery	2 X CR2 Batteries	Low Battery Alert	Yes
Battery Life	12, 000 Cycles (1 Year Approx Usage)	IP Rating	IP66
Emergency Power	USB C	User Capacity	Fingerprint: 100 Password: 250 Card: 1000

1.3 FUNCTIONAL FEATURES


Encrypted communication	Encrypted communication is carried among lock-app-server.
Door opening records	Unlocking method + unlocking IC + time. Users can get door opening records for recent 6 months through the app. No data lost.
Cache	The electronic cylinder can cache each door opening record locally. Data will be automatically synchronized to the app when connected via Bluetooth.
Alarm	Low battery alarm, door opening alarm.
Manage users	Adding new users via app.
Power status display	Displays power value or status.
Door opening via app	After Bluetooth connection between phone and cylinder, the door can be opened directly via the app.
New user cards added via app	After Bluetooth connection, new user cards can be added via the app.
Add fingerprint by app	After Bluetooth connection, fingerprints can be added to open the door.
Add password by app	After Bluetooth connection, passwords can be added to open the door.
Share with specified validity	Administrators can create users with a specified validity period via the app.
Door opening mode synchronization	After app connection, door opening methods synchronize between the cylinder and cloud.

2. INSTALLATION


The Lion Head Locks LHL-STRONGA-CAMLOCK1 Smart CAMLOCK is designed for both residential and light commercial use. It supports multiple unlocking methods including mobile app, passcode, RFID card, fingerprint, and Bluetooth access, providing flexible and secure entry without the need for a traditional mechanical key.

2.1 INSTALLATION DIRECTIONS

 
Remove the existing cylinder

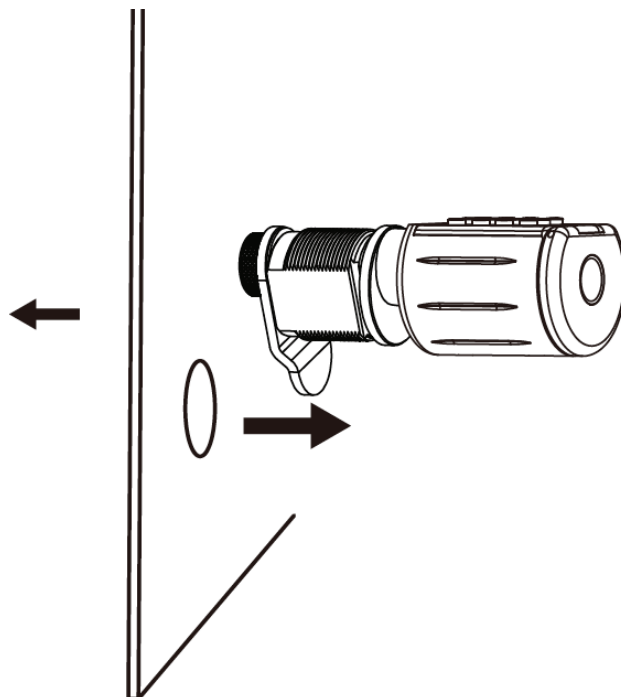

 
Use the allen key to unscrew the knob cover.

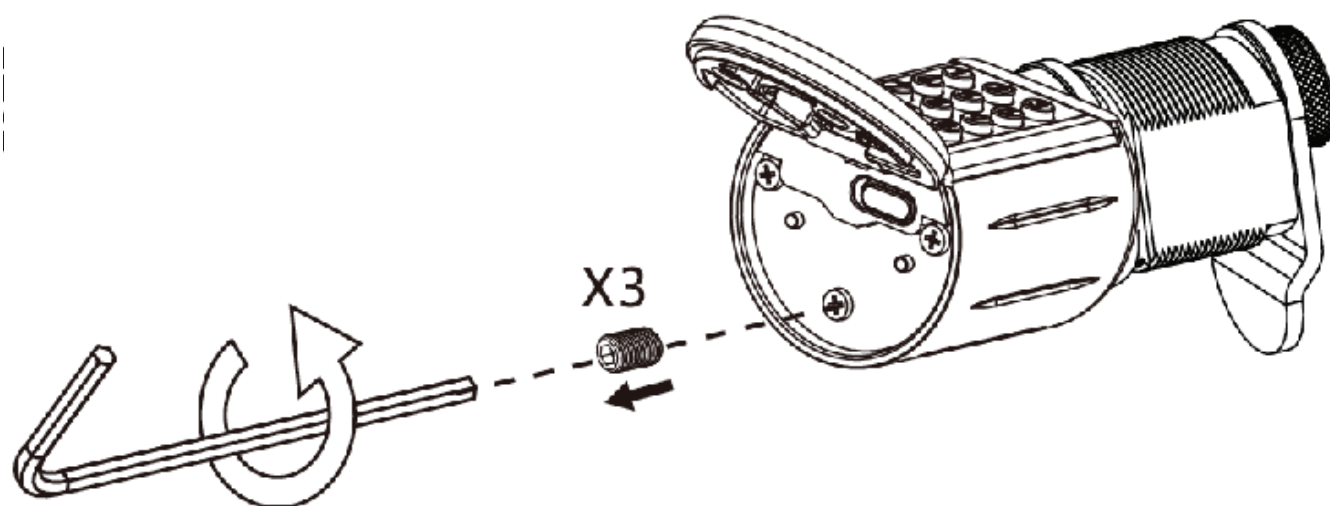

 
Open the knob cover and put the new batteries inside.

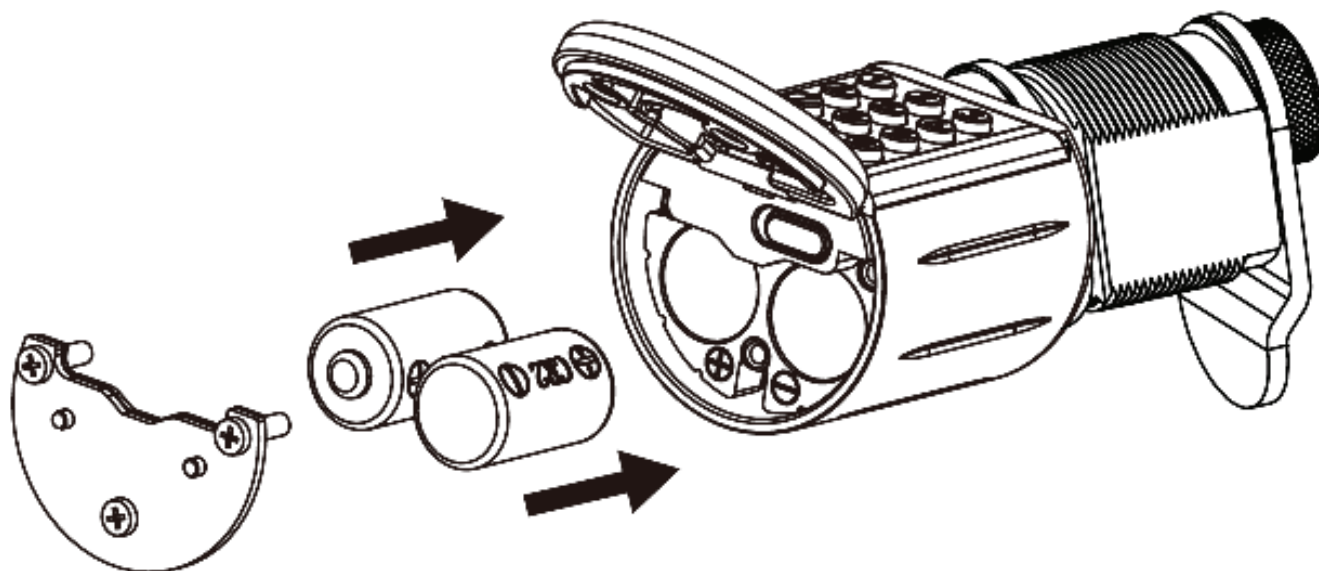


Refit the knob cover.

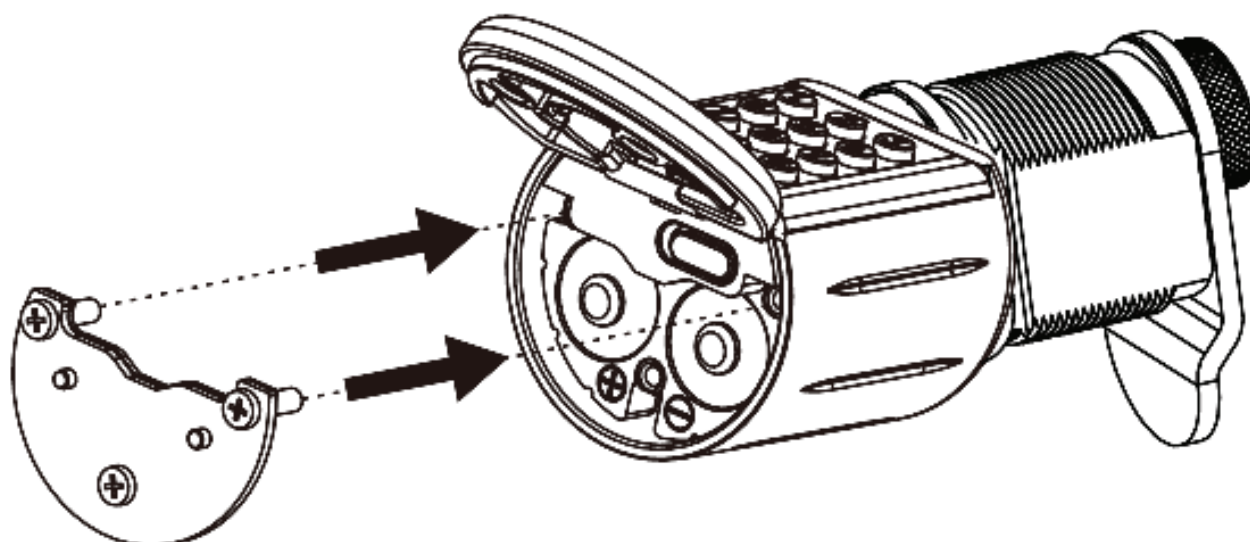 

 
Use the allen key to fix the 3 screws into the cover.

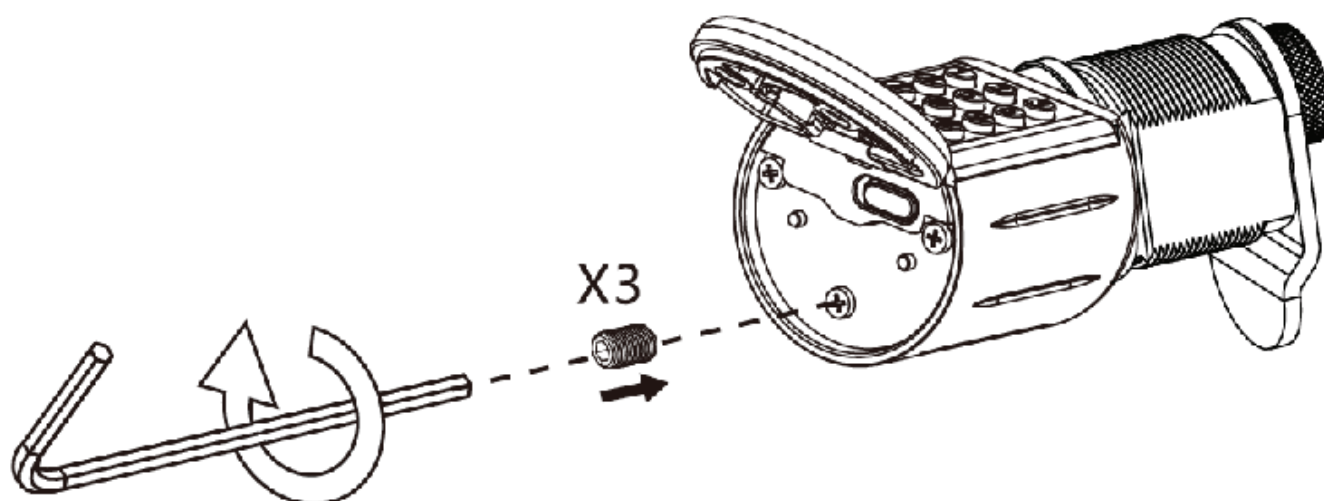

 Take off the mop, The cylinder shall be inserted into the hole

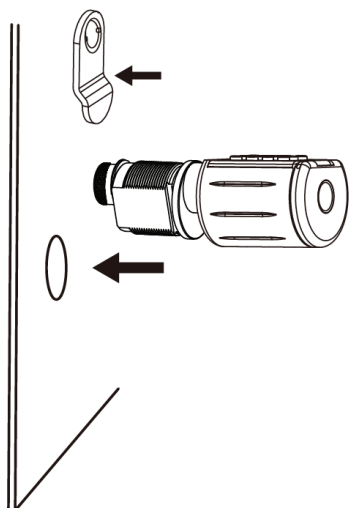


 Fasten the mop, Tighten the screws of the cylinder

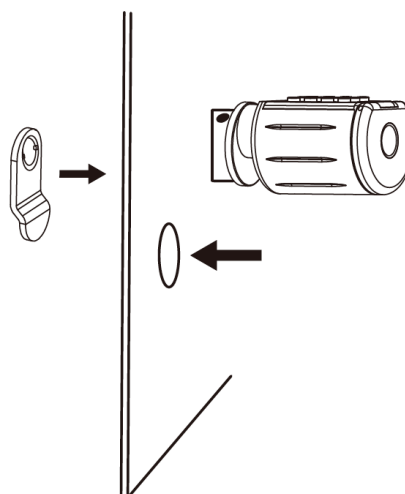

2.4 WHAT YOU SHOULD PAY ATTENTION TO

 1

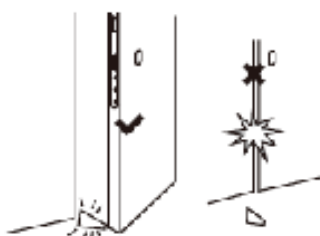

2



Battery Life
13000 operation/1.5 year

 
3



4



5

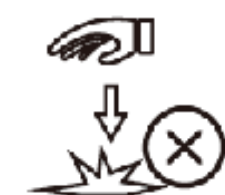

6



0-3 years old

7



8



3. LIONHEAD LOCK CONTROL APP INTRODUCTION

Lionhead App is a mobile application used to manage and operate your smart lock via a smartphone. Through the app, users can lock and unlock the door, manage users and access permissions, and adjust lock settings such as privacy and security functions. Lionhead App provides a convenient and secure way to control your lock without the need for physical keys.

 
3.1 LIONHEAD APP DOWNLOAD




Download the Lionhead App from the Apple App Store or Google Play Store. Either scan this QR code or search for Lionhead App on your mobile phones app store.

3.2 LIONHEAD APP USER REGISTRATION (ADMINISTRATOR)

1. Open the Lionhead App

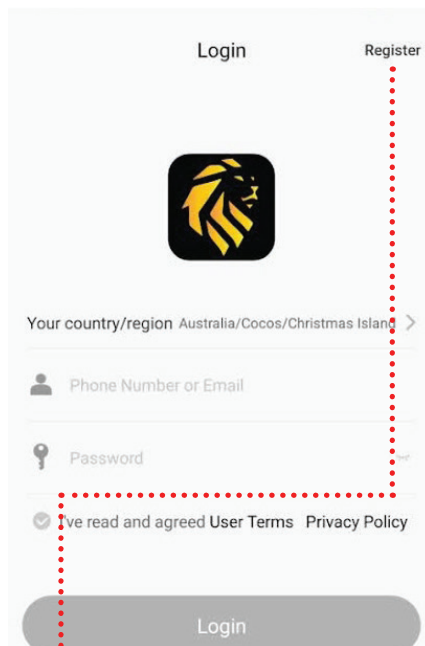

 
2. Select Register

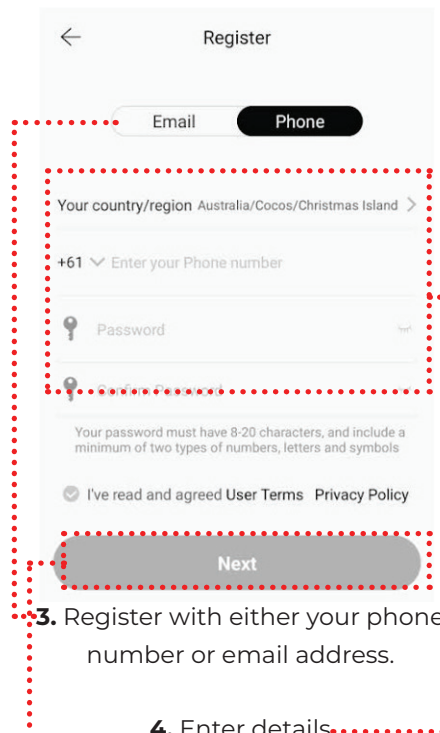

3. Register with either your phone number or email address.

4. Enter details

 5. Select "Next" to proceed

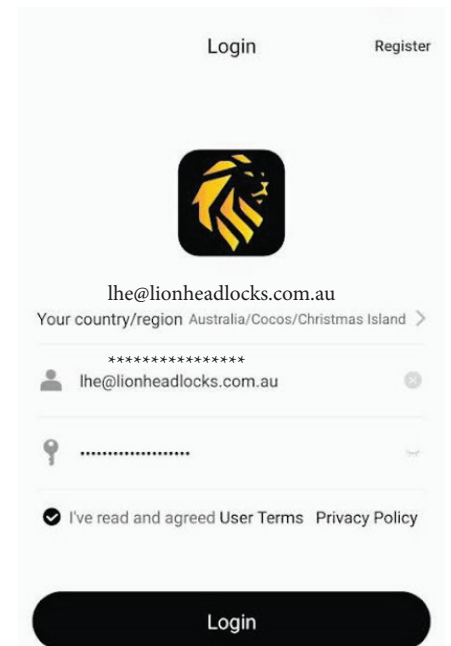


6. Login with your registered details

3.3 ADD LOCK VIA LIONHEAD APP (BLUETOOTH)


DEFAULT LOCK PASSWORD IS 123456



 
1. Select "Add Lock" button

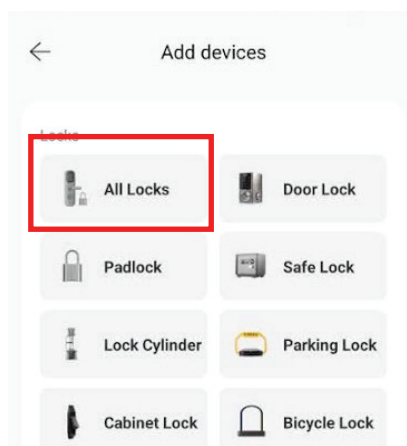

 2. Select the lock type, in most cases "All Locks" will find the lock the quickest via bluetooth

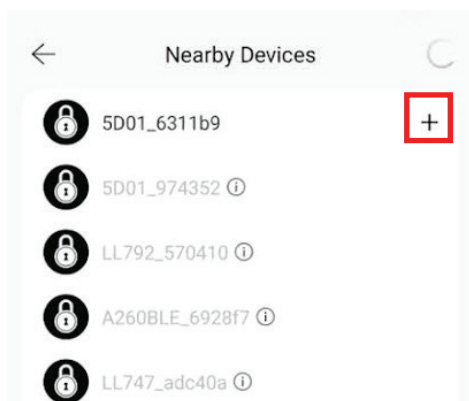

 3. Select the "+" button next to the lock in the Nearby Locks list.

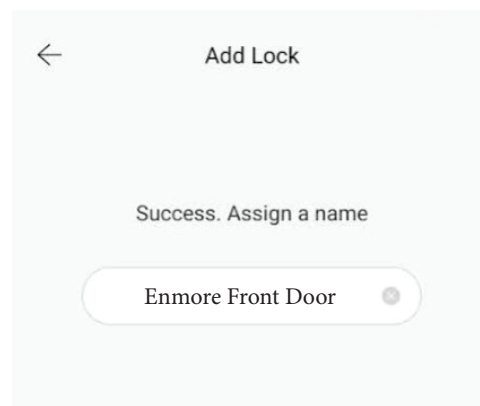


4. Rename lock to your desired name and complete lock registration process.


3.4 CONNECT LOCK TO WIFI VIA LIONHEAD APP

PLEASE NOTE: LHL-WIFI-GATEWAY-G5 REQUIRED FOR DUAL BAND WIFI

 
1. Select your lock from the Lionhead App home page

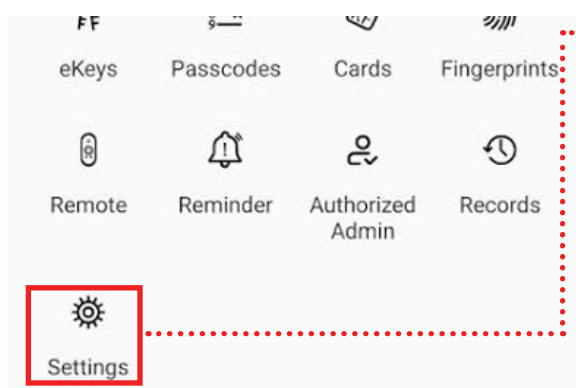

 2. Select the "Settings" button from the lock management page


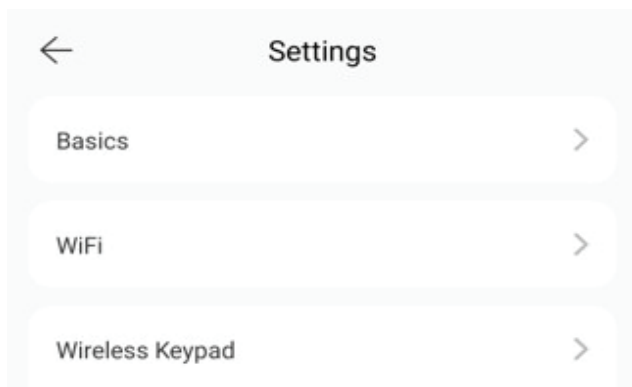


 3. In the Settings menu, tap WiFi to enter the Wi-Fi settings menu.

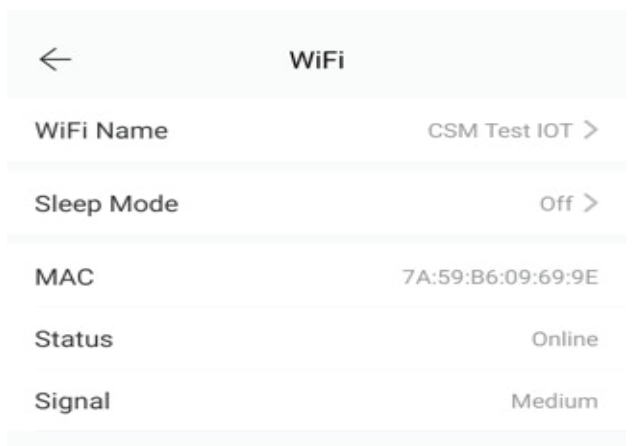


5. Turn Sleep Mode OFF to keep Wi-Fi connected for remote unlocking.

  - Wi-Fi remains connected at all times
- Remote unlocking is enabled
- Lock activity messages are received in real time

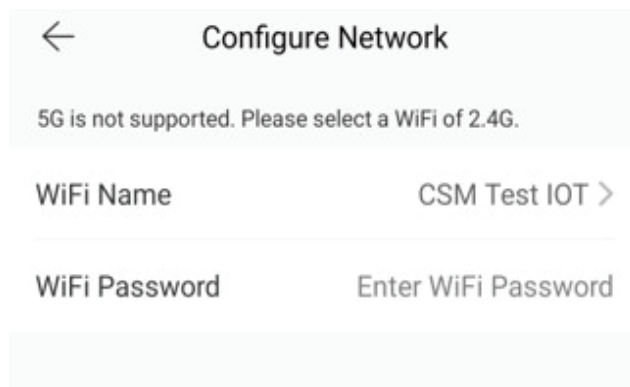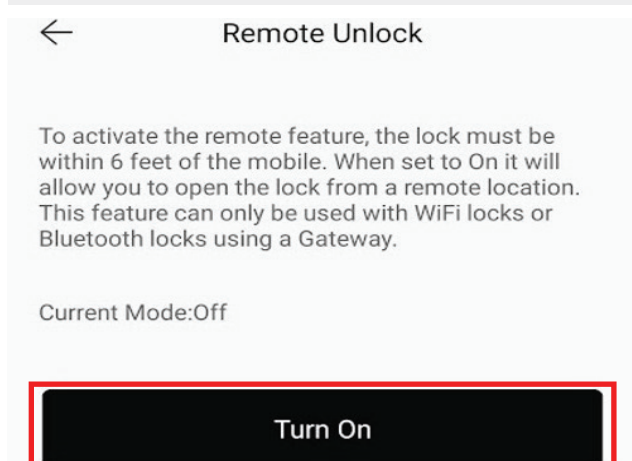

 4. Select a 2.4GHz Wi-Fi network and enter the password.

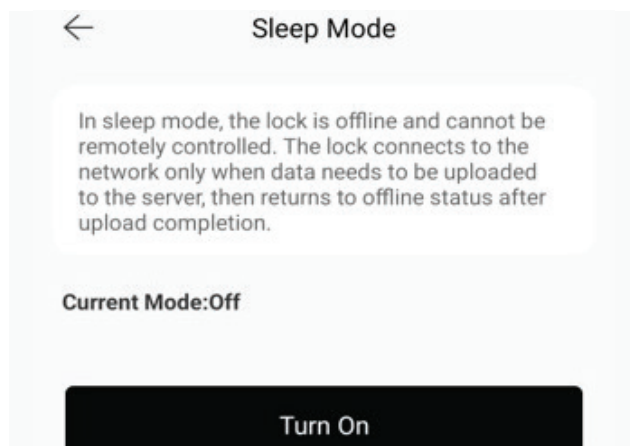

6. Turn Sleep Mode ON if you only require message reporting.

- Wi-Fi connects only when a message is reported
- Remote unlocking is disabled
- Only status messages can be received

7. Enable Remote Unlock to allow the lock to be opened via the app.

PLEASE NOTE: THE CAMLOCK LOCK SUPPORTS 2.4GHZ WI-FI ONLY. 5GHZ NETWORKS ARE NOT SUPPORTED.

4. LIONHEAD APP OPERATIONS

Lionhead App provides a range of operational functions that allow users to manage access and monitor lock activity.

Through the app, administrators can add and manage users, issue and configure eKeys, select different unlocking methods and view operation records and access reports.

4.1 UNLOCK SCHEDULE TYPES

Lionhead App allows administrators to control when and how users can unlock the door by assigning different access schedules. These schedules define the duration and timing of access, providing flexibility for temporary, recurring, or permanent users.

Timed:

Access is granted for a specified start and end time.

One-time:

Access is valid for a single use only.

Permanent:

Access remains valid with no time restrictions.

Custom:

Access is configured using user-defined date and time settings.

Recurring:

Access is granted on a repeating schedule, such as specific days or times.

 
4.2 ENSURE LOCK CONNECTION




Ensure that Bluetooth communication is functioning correctly. After connecting your phone to the door lock tap the unlock icon to unlock the door. The phone must be within 5 metres of the lock.

4.3 EKEY SET UP


eKeys allow users to unlock the door using the Lionhead App on a smartphone. Access permissions can be issued, modified, or revoked by an administrator with flexible scheduling options for temporary or permanent

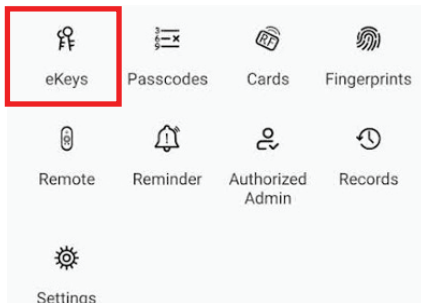

 
1. Select "eKeys" button

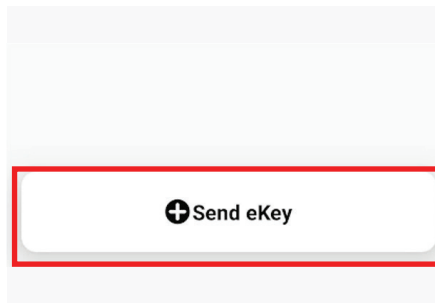

 
2. Select "Send eKey" button

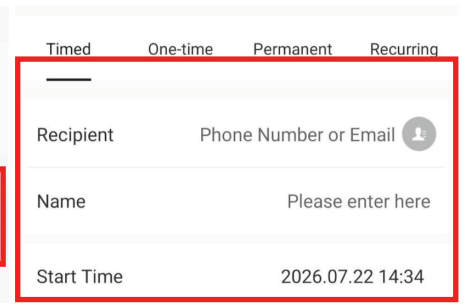

 3. Select schedule type and enter recipient details (email or phone)

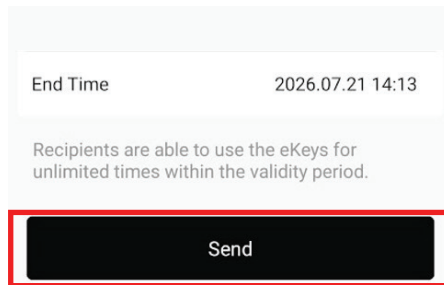

 4. Press the "Send" button

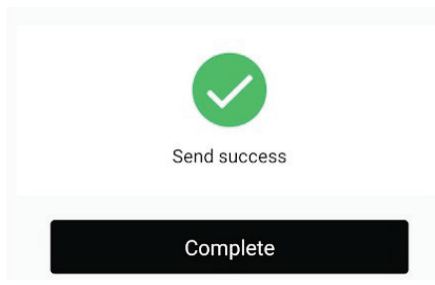


5. You will receive a success notification

Hello,
You have received an ekey, and you can unlock the door using the following methods:
Install the app, log in with your account, and unlock via the app.
Account: [lionhead@lionhead.com](#)
Password: [123456789](#)
Thank you!


6. Recipient will receive an email with unlock details

4.4 PASSCODE SET UP

 
Passcode unlock allows users to open the lock by entering a numeric code on the keypad. Passcodes can be assigned with different access schedules and managed through the app, providing a convenient keyless access option.

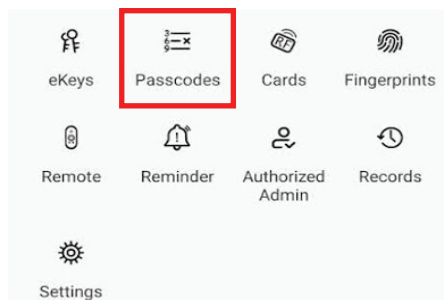

 
1. Select "Passcodes" button

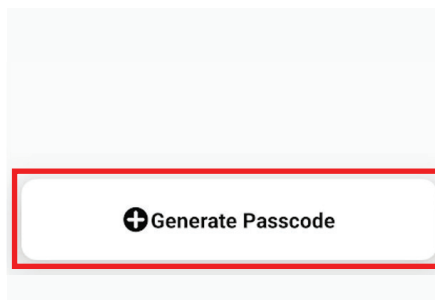

 
2. Select "Generate Passcode" button

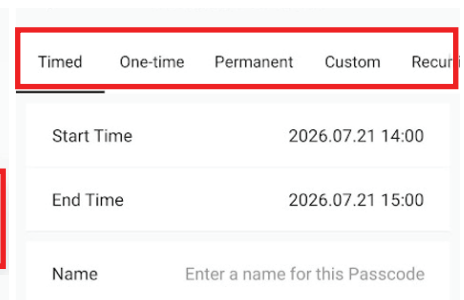

 
3. Select schedule type

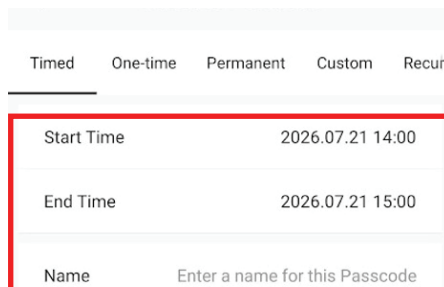

 4. Set passcode details. These will differ as per the schedule type.

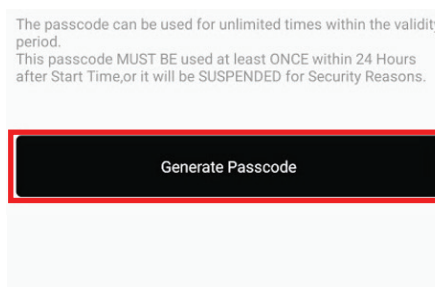

 
5. Select "Generate Passcode"

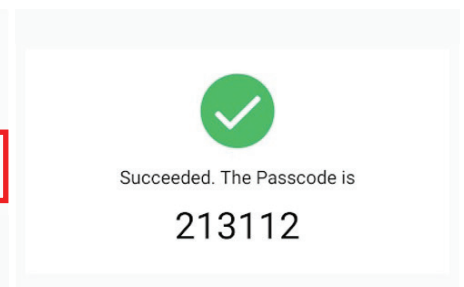

6. You will receive a confirmation that your passcode has been set up

4.5 CARD SET UP

 
Card unlock allows authorised users to open the lock by presenting a registered access card to the reader. Cards can be added or removed through the app, providing a simple and reliable access method.

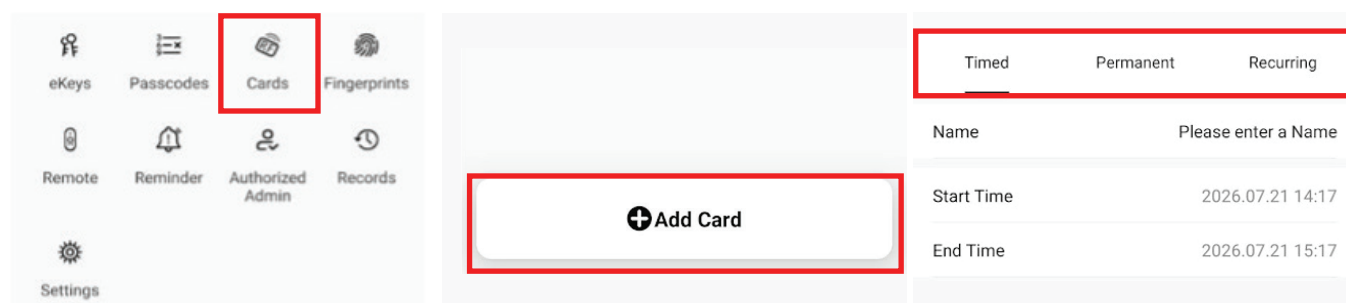

1. Select "Cards" button

2. Select "Add Card" button

 3. Select schedule type

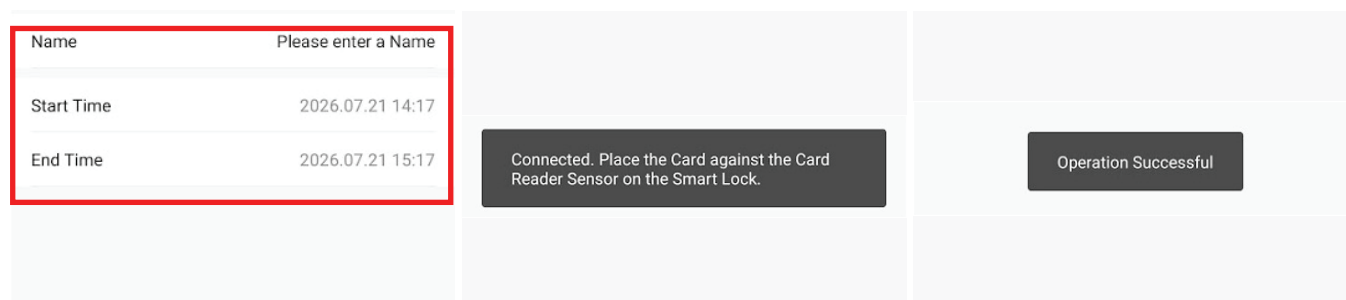


4. Add the shedule details and select "Ok"

5. Place the card to the keypad of the lock

6. You will recieve a success notification once the card is

4.6 FINGERPRINT SET UP

 
Fingerprint unlock allows authorised users to open the lock using a registered fingerprint. Fingerprints are enrolled and managed through the app, providing fast, secure access without the need for keys, cards, or passcodes.

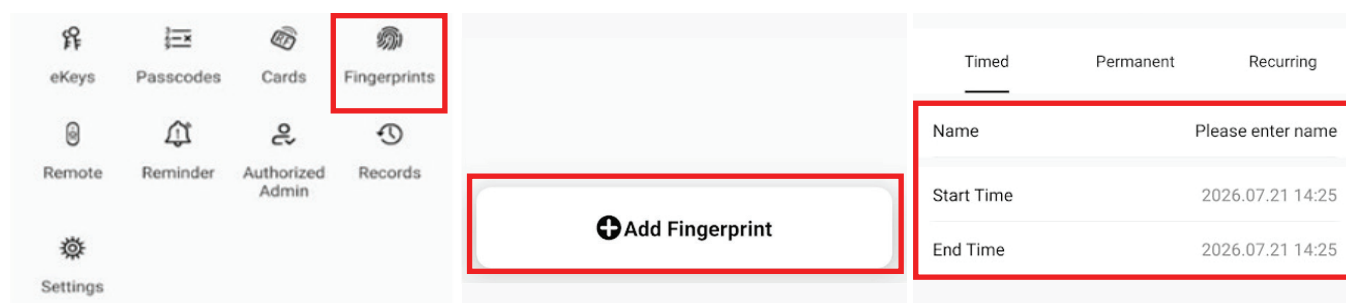

1. Select "Passcodes" button

2. Select "Add Fingerprint" button

 3. Select schedule type, add details and select "Next"

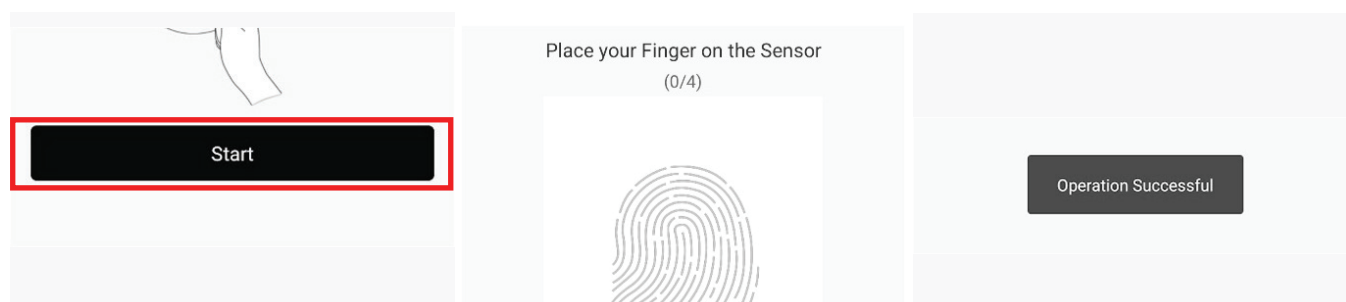

4. Select "Start"

5. Follow onscreen instructions and place your finger on sensor 4 times.

6. You will recieve a confirmation that your fingerprint has been set up

4.7 REMINDERS

The reminder function allows the lock to send notifications for specific events or conditions. These reminders help users stay informed about lock activity and system status, supporting timely awareness and better access management.

Family member arrived home:

Notifies the administrator when a designated family member unlocks the door.

N days without door opening:

Sends a reminder if the door has not been opened for a specified number of days.

Forced door opening:

Alerts the administrator when the door is forced open without authorised unlocking.

Low battery:

Provides a warning when the lock battery level is low and needs replacement.

 
4.7.1 FAMILY MEMBERS ARRIVED HOME

1. Select the "Reminder" button
2. Select the "Family member arrived home" button
3. Select the "Add family member" button


4. Select the "Door opening method" button
5. Select the desired user for notifications and press "Next"
6. Select the desired reminder method and press "Save"

7. You will receive a success notification


4.7.2 N DAYS WITHOUT DOOR OPENING

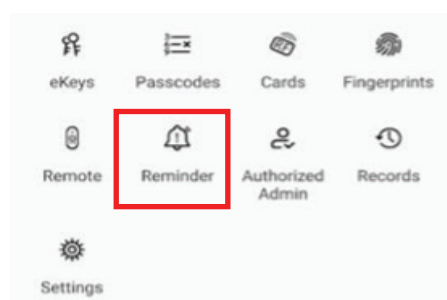

 
1. Select the "Reminder" button

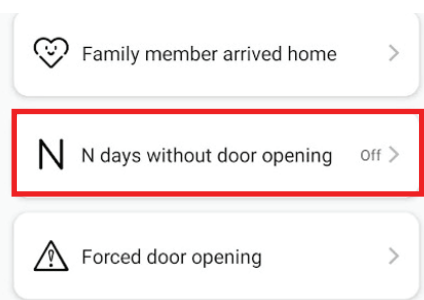

 2. Select the "N days without door opening" button

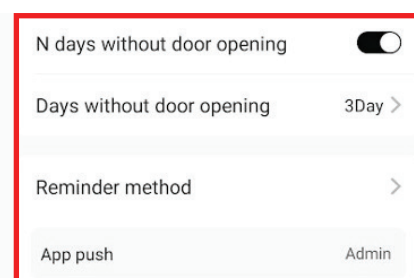


 3. Turn function on, set number of days and reminder method

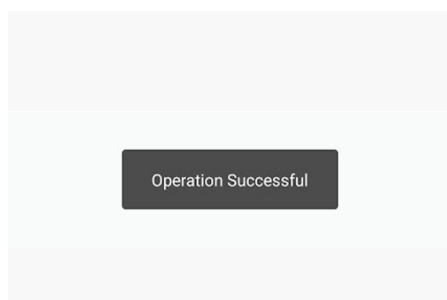


4. You will receive a success notification

 
4.7.3 FORCED DOOR OPENING

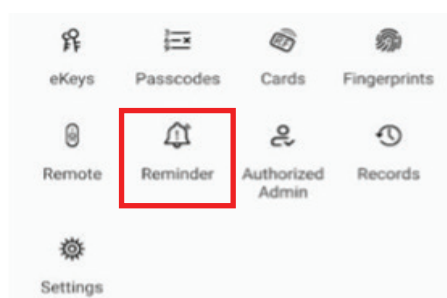

 
1. Select the "Reminder" button

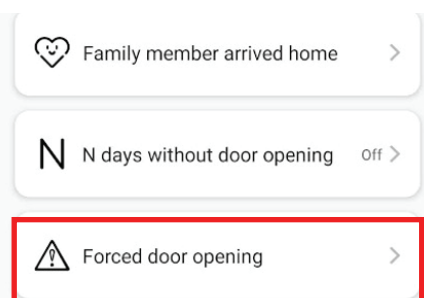

 
2. Select the "Forced door opening" button

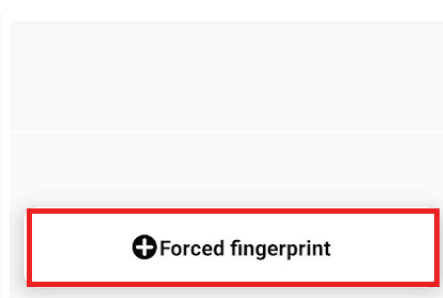

 
3. Select "Forced fingerprint"

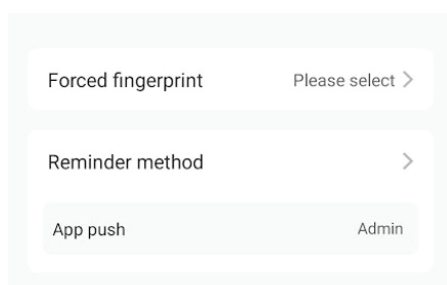

 4. Select "Forced fingerprint" again

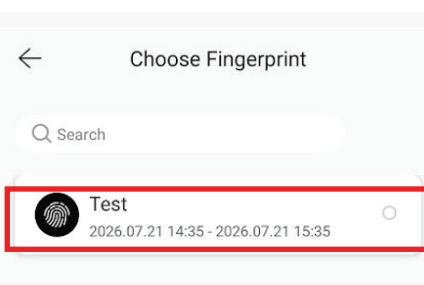


 5. Select the desired fingerprint for notifications and press "Next"

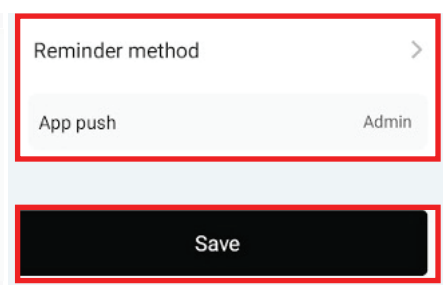


6. Select the desired reminder method and press "Save"

 
4.7.4 LOW BATTERY

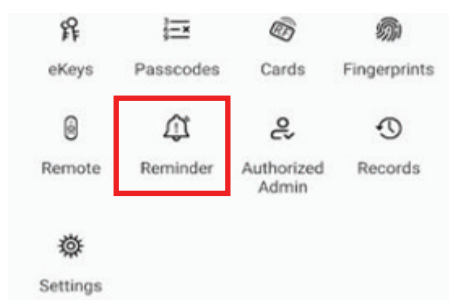

 
1. Select the "Reminder" button

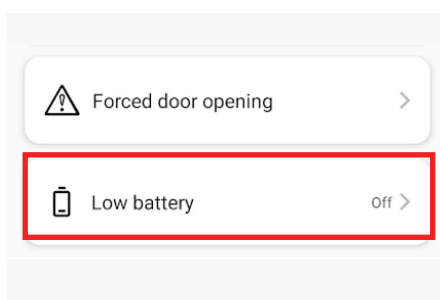

 2. Select the "Low battery" button

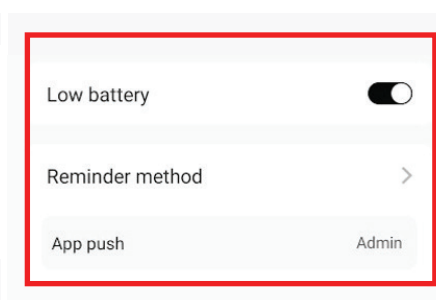

 
3. Turn function on, and set reminder method

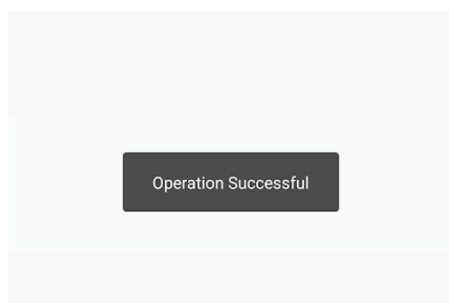


4. You will receive a success notification

4.8 AUTHORISED ADMIN

 The authorised administrator area allows designated admins to manage lock settings, user access, unlock methods, and system notifications to ensure secure and controlled operation of the lock.

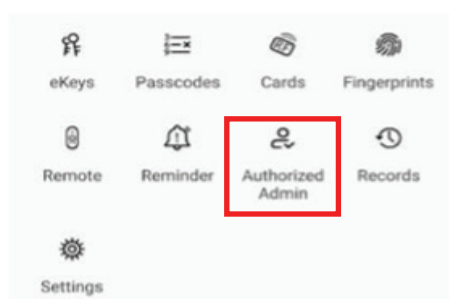

 
1. Select the "Authorized Admin" button

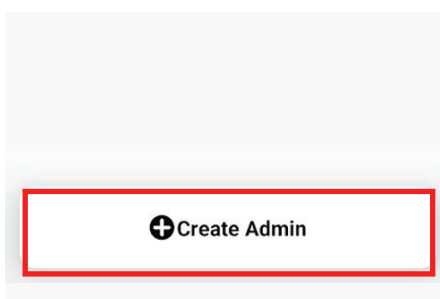


2. Select the "Create Admin" button

Recipient	Phone Number or Email
Name	Please enter here
Start Time	2026.07.21 14:39
End Time	2026.07.21 15:39

 3. Enter new admin details (phone or email)

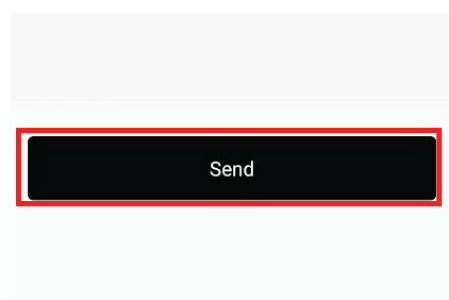

 4. Select "Send"

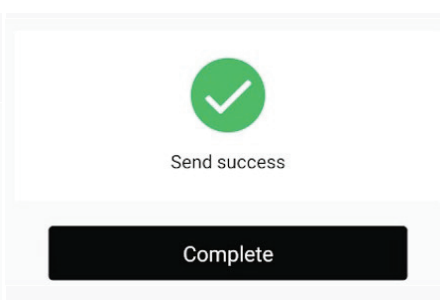

5. You will receive a success notification

Hello,

You have received an ekey, and you can unlock the door using the following methods:

Install the app, log in with your account, and unlock via the app.

Account: lionhead@lionhead.com

 
Password: 12345678

Thank you!

6. Recipient will receive an email with login details

4.9 RECORDS

The records section provides a detailed log of lock activity, including unlock events, user actions, and system notifications, allowing administrators to review and track access history.

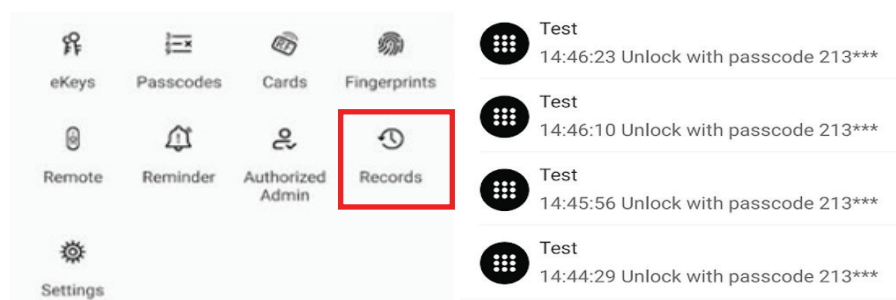

1. Select the “Records” button

2. Browse and search historical records

5. FAQ

How to read operation records?

In the Records of the main interface.

Why can't I unlock my lock after turning off passage mode?

You need to perform an unlock verification in any method, then the passage mode will take effect.

My lock is now permanently offline due to excessive password attempts

If you enter your unlock method more than five times, the lock will enter standby mode for 90 seconds before you can retry to unlock the door.

My keypad won't turn on after installation or does not respond

a) first check that the positive and negative electrodes of the battery have been installed upside down, whether the battery has enough power

b) Remove the back panel and see if it's connected

c) Remove the lock body and check whether the internal wires of the lock are squeezed, and the re-wire

I cannot register my fingerprint

Check the fingers for dirt or wear, and check the fingerprint sensor on the lock for dirt or oil residue. Test the fingerprint function by pressing the sensor to confirm it responds correctly.

My lock is using the batteries faster than expected

Check to see if the circuit and wiring on the internals of the lock are correct.

Set the lock to WiFi Sleep Mode

The outside handle is unlocked, but the door has confirmed that it should be locked. If I pull the handle up, the door will open.

Ensure that the triangle on the clutch is facing the correct direction on the internal of the lock.

6. SUPPORT

For technical and sales support please contact Lion Head Locks on the below details.

INFO@LIONHEADLOCKS.COM.AU

WWW.LIONHEADLOCKS.COM.AU